卡丽 KARAT 安装使用说明书 INSTALLATION INSTRUCTIONS

维纳斯一体化智能坐便器305mm/400mm坑距 VENUS INTELLIGENT INTEGRATED TOILET305mm/400mm RI 24999T-M-WK/25059T-M-WK





科勒旗下 时尚卫浴

上海科勒国际贸易有限公司 地址:上海市外高桥保税区新灵路106号2号楼324室 电话:400-920-8262



www.karat.com.cn

CONTENTS 目录

安装之前Before Installation		
产品清单 Product list		
产品简介Introduction		
功能Features		
安全注意事项Safety Precautions		
技术参数Technical Parameters		
尺寸图Dimensions		
整体图说明Introduction to Overall Diagram		
产品安装Installation		
电池安装Installation		
确认通水、连接电源Confirmation of Water and Power Connection	1	
固定产品Fixation		
过滤网的保养Filter Maintenance		
遥控器使用Usage of Remote Control		
水压Water Pressure		
暖风/风温Heater Wind/Air Temperature		
喷嘴位置Nozzle Position		
冷热清洗Hot and Cold Water Cleaning		
移动清洗Mobile Cleaning		
立体按摩Three-Dimensional Massage		
喷嘴清洗Nozzle Cleaning		
臀部清洗Buttocks Cleaning		
妇洗Women Cleaning		
面板功能设定other Functions Set		
水温WaterTemperature		
座温Seat Temperature		
节电Electricity Saving		
夜灯Nightlight.		
遥控冲水Remote Flush.		
EED		
自动冲水Automatic Flush		
停电冲水Power-Outage Flush		
脚触冲水Foot-Touch Flush		
脚触翻盖/圈Foot-Touch Flip		
注意事项Precautions		
清洁保养Cleaning and Maintenance		
故障分析和处理Fault Analysis and Solution		
保修卡 (顾客留存联) Warranty Card (kept by the customer)		
保修卡 (公司留存联) Warranty Card (kept by the company)		
维修零件图Parts Diagram		
环保说明 Environmental protection	2	!
水效表 Water efficiency table	2	

卡丽 KARAT。 安装说明书 INSTALLATION INSTRUCTIONS

维纳斯一体化智能坐便器305mm/400mm坑距 VENUS INTELLIGENT INTEGRATED TOILET305mm/400mm RI 24999T-M-WK/25059T-M-WK

BEFORE YOU BEGIN 安装之前

- Please read these instructions carefully to familiarize yourself with the required tools, materials, and installation sequences.
 Follow the sections that pertain to your particular installation. This will help you avoid costly mistakes. In addition to proper installation, read all operating and safety instructions.
- · All information in these instructions is based upon the latest product information available at the time of publication.
- These instructions contain important care, cleaning, and warranty information-Please leave instructions for the consumer.
- · Obey all electrical regulations in force at the time of installation.
- ⚠Warning! Risk of personal injury and product damage. Toilet are very heavy and should not be lifted or installed by just one person.
- 请仔细详阅本指引,以便熟悉所需工具、物料及安装程序。请遵照适用的章节来安装本产品,以免安装失当导致不必要的损失。除了有关正确的安装方法之外,还务请详阅所有操作及安全指引。
- 本指引所载之一切资料,均以印刷时所有之最新产品情况为基础。
- 本指引也包含了有关保养、清洁及担保等重要资料-请交予用户保存。
- 遵循当地所有的电器安装规定。

♠ 警告! 小心人身伤害和产品受损。坐便器较重,安装时请勿一人操作。

SAFETY: WARNINGS

Products are precision engineered and should give continued superior and safe performance, provided:

- 1. They are installed, commissioned, operated and maintained in accordance with the recommendations given in this Manual.
- Periodic attention is given, as necessary, to maintain the product in good functional order. Recommended guidelines are given in the MAINTENANCE section.

Carefully inspect the new fixture for any signs of damage.

When installing Products, manufacturers guidelines for power tool safety should be followed.

安全: 警告

产品经过精确制造,性能卓越,经久耐用。为保证产品品质,您必须:

- 1. 按照此手册中推荐的方法进行安装、起动、操作及维护。
- 2. 如有需要,定期检查,令产品保持良好性能状态。日常维护章节中列有推荐方法。 仔细检查新产品是否有损伤。

在安装产品时,必须遵循制造商有关电动工具的安全指令。

TOOLS AND MATERIALS

工具及材料

Pencil	铅笔
Measuring Tape	卷尺
Level	水平尺
Miter Box	钻子箱
Safety Glasses	安全眼镜
Drill	手枪钻
Screwdrivers	螺丝刀
Hole Saw	孔锯

Product list 产品清单

Product 产品	Remote control 遥控器	Battery 电池	Angle valve 角阀	Sealing ring 密封圈	Manual 说明书	Battery Box 电池盒
X 1	X1	Х3	X1	X 1	X 1	X 1
9						

20200416 -1-

INSTRUCTION 产品简介

This product has different functions including warm water cleaning, heater wind, seat heating, damping descent, automatic deodorization, three-dimensional massage, pressure regulation, and nightlight lighting. Seat temperature and cleaning temperature can be adjusted as needed.

本产品具有温水清洗、暖风、座圈加热、阻尼缓降、 自动除臭、立体按摩、水压调节、夜灯照明等功能, 座圈温度、清洗温度,可根据需要进行调节。

FUNCTION

功能

Use 2.4GHz touch remote control to	智能遥控	采掘
operate and convenient. (Refer to page 11 of the manual for usage.)cleaning effect		操考
Through product and remote controller's "buttocks cleaning" button, cleaning is realized.(Refer to page 12 of the instruction for method fo use)	臀部清洗	通键书
Special warm water cleaning for women, convenient, hygiene and comfortable. (Refer to page 12 of the manual for usage.)	妇洗	专特用
Cleaning water pressure can be adjusted as needed. (Refer to page 12 of the manual for usage.)	清洗水压调节	清用
After cleaning, the warm air function can be used, and the warm air temperature can be adjusted to 4 gears. (Refer to page 12 of the Instruction for method of usage)	暖风/风温	清可
The nozzle position is adjustable from behind to front during buttocks or women cleaning, so as to offer accurate cleaning based on the needs of individuals. (Refer to page 12 of the manual for usage.)	喷嘴位置调 节	臀位更12
The alternation of cold and heat cleaning method. (Refer to page 12 of the instruction for method fo use)	冷热清洗	冷考
During cleaning, the nozzle moves forward and backward automatically to clean different spots. The user needn't move his or her body to have wider cleaning and intensified cleaning effect. (Refer to page 12 of the manual for usage.)	移动清洗	清清洗法
	Through product and remote controller's "buttocks cleaning" button, cleaning is realized. (Refer to page 12 of the instruction for method fo use) Special warm water cleaning for women, convenient, hygiene and comfortable. (Refer to page 12 of the manual for usage.) Cleaning water pressure can be adjusted as needed. (Refer to page 12 of the manual for usage.) After cleaning, the warm air function can be used, and the warm air temperature can be adjusted to 4 gears. (Refer to page 12 of the Instruction for method of usage) The nozzle position is adjustable from behind to front during buttocks or women cleaning, so as to offer accurate cleaning based on the needs of individuals. (Refer to page 12 of the manual for usage.) The alternation of cold and heat cleaning method. (Refer to page 12 of the instruction for method fo use) During cleaning, the nozzle moves forward and backward automatically to clean different spots. The user needn't move his or her body to have wider cleaning and intensified cleaning effect. (Refer to page 12 of the manual for	operate and convenient. (Refer to page 11 of the manual for usage.) cleaning effect Through product and remote controller's "buttocks cleaning" button, cleaning is realized.(Refer to page 12 of the instruction for method fo use) Special warm water cleaning for women, convenient, hygiene and comfortable. (Refer to page 12 of the manual for usage.) Cleaning water pressure can be adjusted as needed. (Refer to page 12 of the manual for usage.) After cleaning, the warm air function can be used, and the warm air temperature can be adjusted to 4 gears. (Refer to page 12 of the Instruction for method of usage) The nozzle position is adjustable from behind to front during buttocks or women cleaning, so as to offer accurate cleaning based on the needs of individuals. (Refer to page 12 of the manual for usage.) The alternation of cold and heat cleaning method. (Refer to page 12 of the instruction for method fo use) **BØM/MAIL** **BØM/MAIL** **BØM/MAIL** **BØM/MAIL** **BØM/MAIL** **BØM/MAIL** **BØM/MAIL* **BØM/MAIL** *

智能遥控	采用2.4GHz触摸遥控器,无线遥控,操作方便,自由掌控。(使用方法参考说明书第11页)
臀部清洗	通过产品与遥控器的"臀部清洗"按键实现清洗。(使用方法请参考说明书第12页。)
妇洗	专为女士设计的温水清洗,满足女性特殊需求,既方便又舒适卫生。(使用方法参考说明书第12页)
清洗水压调 节	清洗水压可根据需要进行调节。(使用方法参考说明书第12页)
暖风/风温	清洗后可使用暖风功能,暖风温度4档可调。(使用方法参考说明书第12页)
喷嘴位置调 节	臀部清洗或妇洗时,可前后调节清洗 位置,满足个人位置需要,以便清洗 更准确。(使用方法参考说明书第 12页)
冷热清洗	冷热交替的清洗方式。(使用方法请参考说明书第12页。)
移动清洗	清洗时喷嘴自动向前、向后,调节清洗位置。人体无需挪动,扩大清洗范围,增强清洗效果。(使用方法参考说明书第12页)

Three- Dimensional Massage	The "three dimensional massage" function is achieved through remote control buttons. (Refer to page 12 of the instruction for method fo use)
Nozzle Cleaning	Under the state of power on and user off the seat, press the button "Nozzle Cleaning" on the remote control and the cleaner extends out automatically. Use toothbrush to clean the nozzle. (Refer to page 12 of the manual for usage.)
Water Temperature	The water temperature can be adjusted automatically according to your preferences. A well-suited temperature relaxes you thoroughly, bringing first-class experience of the toilet. (Refer to page 13 of the manual for usage.)
Seat Heating	The seat temperature can be adjusted automatically according to your preferences. Say goodbye to days when you have to expose your skin to freezing cold seat, and embrace warmth and comfort. (Refer to page 13 of the manual for usage.)
Electricity Saving	When not in service, the temperature of the toilet seat is lowered automatically to reduce unnecessary power consumption from heating and save electricity. (Refer to page 13 of the manual for usage.)
Nightlight lighting	You needn't turn on the light of the room when using the toilet at night. The LED light consumes little power to offer you guidance in the darkness. (Refer to page 13 of the manual for usage.)
Remote Flush	Press the button "Remote Flush", and the toilet flushes once. Say goodbye to the traditional way of flushing. This function is especially useful for the elderly and children of your family. (Refer to page 13 of the manual for usage.)
LED	Press the button "LED" to turn on/off the light with the touch of your foot. The unique LED lighting brings you convenience as well as perfect toilet experience. (Refer to page 13 of the manual for usage.)
Automatic Flush	Flush automatically when the body leaves the sensor area of toilet seat. It is more practical and convenient, preventing any inconvenience or embarrassment from forgetting to flush after using. (Refer to page 14 of the manual for usage.)

立体按摩	通过遥控器按键实现"立体按摩"功能。(使用方法请参考说明书第12页。)
喷嘴清洗	在开机离座状态,按下遥控器上的 "喷嘴清洗"按键,清洗器自动伸出。用牙刷清洁喷头。(使用方法参 考说明书第12页)
水温	根据个人喜好,自动调节水温,合适的温度让您尽享其中,给您带来怡人的如厕体验。(使用方法参考说明书第13页)
座温	根据个人喜好,自动调节座温,告别 赤裸的皮肤接触到冰凉刺骨的座圈, 让您拥有温暖感觉,舒适到家。(使 用方法参考说明书第13页)
节电	节电功能是指在不使用的情况下,自动降低座圈温度,减少加热功耗,达到节电目的。(使用方法参考说明书第13页)
夜灯照明	夜间如厕您无需开灯,超低能耗LED, 给您柔和悦目的指引。(使用方法参 考说明书第13页)
遥控冲水	按下"遥控冲水"按键,产品会冲水一次,告别传统的冲水烦恼,尤 水一次,告别传统的冲水烦恼,尤 其适合家庭中的老人和小孩。(使 用方法参考说明书第13页)
LED	按下"LED"按键,实现脚触灯光开启/关闭。独特的LED灯光设计为您带来方便,让如厕体验更加完美。(使用方法参考说明书第13页)
自动冲水	人体离开座圈感应区域,会自动进行 冲水,更实用更方便,杜绝使用后忘 记冲水引起的不便和尴尬。(使用方 法参考说明书第14页)

Power Outage Flush	When there is a power outage at home, press the button "Power/Stop" on the side of the product to flush. The user-friendly design provides you with a convenient lifestyle. (Refer to page 14 of the manual for usage.)
Foot-Touch Flush	It takes only a gentle touch with your foot to flush, completely freeing your hands. (Refer to page 14 of the manual for usage.)
Foot-Touch Flip	It takes only a gentle touch with your foot to flip open the cover and seat, completely freeing your hands and preventing their exposure to bacteria. The design provides you with a healthy lifestyle. (Refer to page 14 of the manual for usage.)

停电冲水	当家里停电时,按下产品侧面的"电源/停止"按键可实现冲水功能,人性化设计,为您提供便捷的生活方式。(使用方法参考说明书第14页)
脚触冲水	只需脚尖轻触,即可实现冲水功能, 底解放双手。(使用方法参考说明书第 14页)
脚触翻盖/圈	只需脚尖轻触,即可实现翻盖、翻圈 功能,彻底解放双手,减少细菌的接 触,为您提供健康的生活方式。(使 用方法参考说明书第14页)

NOTICE

In order to avoid injury and property damage to you and others, you must follow the following notes of safety precautions:

- Dangers caused by ignoring following warnings or incorrect use fall into two types.
- Warning: Violation of Warning precautions may lead to serious injury or death.
- Attention: Violation of Note precautions may lead to injury or property damage.

安全注意事项

为了避免对您和他人造成伤害和财产损失,请您务必 遵守如下有关安全方面的注意事项:

- 无视如下警示, 因错误的使用方法而产生的危害
- ▲ 警告: 违反警告事项时,可能会造成人的死亡或
- ↑ 注意: 违反注意事项时, 可能会造成人的伤害 或物质的损失。

 
WARNING



The product requires AC 220V/50Hz power. Make sure that the power supply is consistent with the rated voltage and reliable grounding exists within the three-pin socket, so as to avoid electric shock or damage to the product.



本产品要求电源为交流220V/50Hz, 请确保电源与 本机额定电压相符, 保证三芯插座内有可靠的接 地, 以免触电或损坏产品。





儿童不应玩耍器具,使用时应在成人监护下 使用,避免儿童单独接触产品。 在老人、小孩、身体障碍者、极度疲劳者 醉酒者、皮肤病患者或皮肤敏感者使用时, 或长时间使用时应把各种功能的温度调到 较低档,以免烫伤。



Do not use plugs with loose power outlet, do not put the body of the product and plugs in the water or shower them with water, and do not use the product under excessively humid condition, so as to avoid electric shock or fire. When power failure occurs, immediately unplug the power cord and contact maintenance staff.



请勿使用插头配合松动的电源插座, 请勿将本体 和插头放在水里或淋水,请勿在过于潮湿的环境 下使用,以免造成触电或火灾。电源出现故障时 请立即拔下电源插头并联系维修人员。



Do not disassemble, repair or modify the product by yourself, so as to avoid electric shock, fire, electric leakage or other faults.



严禁自行拆卸,修理或改造产品。以免造成触 电,火灾,漏电或其它故障。



Make sure that the water supply is clean tap water. Do not use contaminated or industrial water.



请确保使用的水源是干净的自来水,不可使用污染的水源或工业用水。



Prohibit stepping on the body and cover of the machine and prohibit putting heaters or heavy objects on the body, cover, power cord of the machine, so as to avoid electric shock or other injuries and damage.



严禁踩踏机器本体和座盖, 严禁把加热器或重物 放在机器本体, 座盖, 电源线上, 以免造成触电 或其他伤害和损坏。





 
Do not use bad electrical outlet or damaged power plugs, and use and protect the power cord correctly. so as to avoid risks of electric shock or fire due to bad contact or damage.

If the power cord is damaged, it must be changed by specialist of the manufacturer, its maintenance department or other similar departments, or electric shock or fire may occur.



请勿使用不良的电源插座及破损的电源插头,请 正确使用并保护好电源线,以免接触不良、破损 等导致触电或引发火灾等危险。


※如果电源软线损坏,为了避免危险,必须由制造商、其维修部或类似部门的专业人员更换,否 则容易引起触电、火灾。



在寒冷的冬季,当产品在经过长途运输或长时间 存放时,产品内剩下的积水可能会发生冻结现 象。为预防冻结造成损坏,请采取防冻措施。



 
Please wipe the dust on the power plug with dry cloths regularly.





请定期用干布擦拭电源插头上的灰尘。

 清扫时,将电源插头拔下。 否则当绝缘不良时,会引起火灾。



CAUTION

Do not put fire like burning cigarettes close to the product.

Do not stand on or put heavy objects on the product.

Do not urinate on the nozzle of the cleaner to prevent

filth blocking, and do not urinate into the outlet of

heater wind to avoid corrosion and electric leakage.

Do not strike the product.

against freezing.

Do not block the heater wind outlet with finger or other objects.

Do not twist and break the water inlet pipe.



Polish the outer shell with clean wet cloths. Do not use any organic solvents.

Do not plug or unplug the power cord with wet hands.

Do not pull the pins of the plug.

Do not reverse the product to use, which damages the product.

Please don't plunge into toilet bowls with easily blocked items such as newsprint, paper diapers, and sanitary napkins.

Please do not use it in environment below 1°C.

Please do not embed cementitious materials (cement mortar, etc.) on toilet seats to prevent them from swelling due to swelling.

Please do not use gravity to impact the ceramic to prevent damage.

注意

请勿将香烟等火种接近产品。

请勿站人及将重物放在产品上。

请勿撞击产品。

请勿用手指或其他物品堵塞暖风口。



请勿将进水管扭曲破损。

请用清洁的湿布擦亮外壳, 不要使用任何有机溶

不要用湿手拔插电源。

请勿拉扯电源插头。

请勿将产品翻转使用, 否则会损坏产品。

请不要向便器内冲入新闻纸、纸尿垫、妇用卫生

请不要在1℃以下环境中使用。

请不要在便器底座埋入胶凝材料(水泥砂浆等), 以防止因膨胀而撑裂便器。

请不要用重力撞击陶瓷,以防止破损漏水。

Please unplug the power cord when it thunders.

 


When out of service for a long time, please cut off water and the circuit and drain water within the product.

Do not put the body of the product near heaters or fireplace, which may deform and discolor it.

Please prevent the sun from shining directly on the product, which may discolor the product. Danger: Risk of electric shock exists. Cut off the

在打雷时请将电源插头拔掉。



请不要把取暖器或壁炉等产品靠近本体, 否则会

防止日光直接照射, 否则会引起产品变色。



power before operation. Warning: To avoid danger from false reset of the thermal circuit breaker, do not supply power through external switching devices such as a timer or a connected on-off circuit timed by general components.

危险:存在触电危险。操作前应切断电源。



警告:为避免由热断路器的误复位产生危险,不能通过外部开关装置供电,例如定时 器或者连接到由通用部件定时进行通、断 的电路。



CAUTION: Risk of hazardous gases. if a new toilet is not installed immediately. temporarily place a rag in the floor flange opening

- · NOTICE: Follow all local plumbing and electrical
- codes
 NOTICE: Receptacles installed in bathroom to be located at least I meter from a bathtub or
- Obaserve all local plumbing and building codes.
 Carefully inspect the new toilet for damage
 Water and electrical supplies may be wall mounted
 There is a wiring schematic on the inside of the junction Box cover



WARNING: risk of electric shock for hardwire install

ations/through-floor electrical supply connect only to properly -rounded, dedicated 220 V/50 Hz circuit protected by a class A Ground-Fault Ciruit-Interrupters (GFCI) or Earth-Leakage Circuit-Breakers (ELCB).

WARING:must use 10A receptacle



谨慎:存在有害气体的危险。如果新坐便器不能 立即安装,可在地面排污口上临时遮盖一块旧

- 注意: 遵守本地所有的管道和电器规程。
- 注意: 安装在浴室内的插座位置距离浴缸或淋浴喷头至 少应为一米。 • 遵守所有的本地管道安装规程和建筑规范。 • 仔细检查新坐便器有无损坏。



警告:产品存在电击的危险。本产品只可连接到 良好接地, 电源要求交流220V/50Hz电路, 必须 带接地故障断路器或接地漏电断路器。

24999T-M-WK/25059T-M-WK

警告:必须使用不小于10A插座 最好使用防水插座

SPECIFICATIONS

Product Type	24999T-M-WK/25059T-M-WK
Rated Voltage	220V~/50Hz
Rated Power Consumption	Inlet Temp 15 °C Outlet Temp 40 °C Flow 760ml/min Power 1330W
Length of Power Cord	approx. 1.5m
Safety Device	Leakage Protection Action Current ≤ 10mA
Waterproof Level	IPX4
The minimum necessary water pressure	Dynamic pressure 0.14MPa, and ensure that the water flow of the water supply pipeline is above 18L/min.
Maximum water pressure	0.75MPa (static pressure)
Suitable Temperature	1℃~40℃
Water Supply	Connected to DIN1/2" or above tap water pipeline
Dimensions	683×414×531mm
Cleaning Mode	Jet siphon
Pit Distance	305mm/400mm
Heating Mode	Instant Heating
Cleaning Device	19
Flush Temperature	Four Levels (Room Temp~ approx. 40 °C)

技术参数

刑早

型亏	249991-M-WK/250591-M-WK		
额定电压	220V~/50Hz		
额定消耗功率	入水温度15℃ 出水温度40℃ 流量760ml/min 功率1330W		
电源线长度	约1.5m		
安全装置	漏电保护动作电流≤10mA		
防水等级	IPX4		
最低必要水压	0.14MPa且保证流动时水流量在18L/min以上		
最高水压	0.75MPa(静止时)		
适用温度	1℃~40℃		
供水方式	DIN1/2"或以上自来水管道连接		
外形尺寸	683×414×531mm		
洗净方式	喷射虹吸式		
使用坑距	305mm/400mm		
温水加热方式	瞬间加热式		
洗净装置			
冲洗水温	四档调节(常温~约40℃)		


Safety Device	Butterfly Thermostat, Thermal Fuse, Flow Testing Device
Heater Wind Devic	e
Air Temperature Adjustment	Room Temp~ approx. 55 ℃
Wind Speed	Approx. 4m/s
Safety Device	Bimetallic Thermostat, Thermal Fuse
Seat Heating Device	e
Seat Temperature	Four Levels (Room Temp~ approx. 40°C
Damping Device	Damping with Slow Descent
Safety Device	Thermal Fuse

安全装置	蝶形温控器、温度保险丝、流量 检测装置
暖风装置	
温风调节	室温~约55°c
风速	约4m/s
安全装置	双金属片温控器、温度保险丝
暖座装置	•
座圈温度	四档调节(常温~约40°C)
阻尼装置	带缓降阻尼
安全装置	温度保险丝

ROUGHING

尺寸图

 Unit:mm 单位:mm








- *The size is for reference only, please check the actual size before installation.
- *此尺寸仅供参考,安装前请仔细测量实际产品。


SKETCH

整体图说明

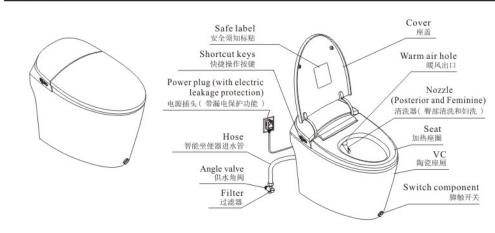

INSTALLATION

- 1.Make a mark of a cross above the sewage hole on the ground
- *Clean the ground and wipe the water from surface.
- *The cleanness and dryness of the ground will impact the fixation of the product.
- 2. Remove the water angle valve and install the designated water angle valve.
- Shut off the general angle valve before removal.
 (Please use the angle valve and hose coming with the product and do not use the old pipe, which may lead to risk of water leakage.)

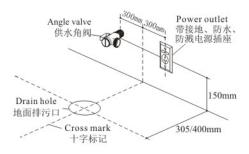

- 3. Roll the ceramic body over and place it on the prepared foam.
- 4. Measure by sight, draw a line perpendicular to the bottom plane on the side of the ceramic body facing the central point of the ceramic's sewage hole, and do the same on the other side. Meanwhile, draw a line perpendicular to the ground through the center of the ceramic's front.
- 5. Install the sealing ring (flange) around the sewage opening in the bottom of the ceramic, be careful to connect them tightly.
- 6. Two people lift the ceramic up, aim the mark on the ceramic at the cross mark of sewage hole on the ground, and slowly put the ceramic down on the ground to overlap the marks. When they overlap, press the ceramic body downward to make the sealing ring (flange) in full contact with the ground and connected closely with the ground.
- XDo not move the ceramic or shake it after the marks overlap, or the sealing provided by the sealing ring (flange) may be damaged, which leads to water leakage.




1. 在地面排污口上画十字标记

※将地面清洁干净,同时将水分擦干。

- 2.拆卸以前的供水角阀,安装上所配置的供水角阀。 ※在拆卸之前要先关闭总角阀。

(必须使用自带的角阀和软管,不要使用旧管,否则会引起漏水风险)

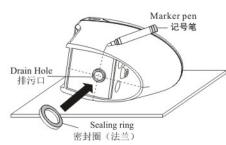


- 3. 将陶瓷体侧翻,放置在预先准备的泡沫上。
- 4. 目测,在陶瓷排污口中心点所对应的陶瓷侧面上画一条垂直陶瓷底平面的线,另一侧面同上,同时在陶瓷前部中间点画一条垂直地面的线。

5. 将密封圈 (法兰) 安装在陶瓷底部排污口上,注意 连接紧密。

6. 两个人将陶瓷抬起,以地面排污口十字标记为对 照,将陶瓷体上的记号对准地面十字标记,慢慢将陶 瓷放在地面上,使两者标记重合。在重合后,将陶瓷 体向下按压,使密封圈(法兰)充分接触地面,与地 面连接紧密。

※在标记重合后切勿移动陶瓷体或左右摇晃,否则由 密封圈(法兰)产生的密封可能受到破坏,从而导致 漏水。

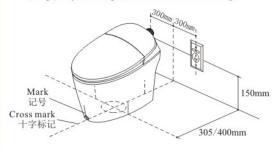




7. Install the water supply hose as shown below and install it on the angle valve.

Note:

Confirm no water leakage is found at all the joints. *If water leaks, please screw the nuts again and reinstall. 7. 将供水软管如下图所示, 安装在角阀上面

主意:

确认各连接部位没有漏水。 ※如漏水,请将螺母类重新拧紧,进行再次安装。

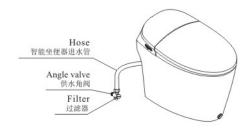

INSTALLATION

Battery Installation

1. Take out the cable.

- 2. Connect the waterproof plugs of DC power, and screw tight the waterproof caps.
- 3. Put battery box in place as illustrated.
- **Batteries and connecting lines have positive and negative ends. Do not thrust it in by force, which may damage the product. For any inquiries, please call customer service or local dealer.

Battery Replacement

- 1.Unscrew battery cover and remove the CR-P2 battery for recycling at special agency.
- Replace with new CR-P2 battery and lock in and screw as illustrated.
- 3.Install batteries in place by referring to battery installation pictures.
- **Batteries should be put away where children can't reach. Please confirm positive and negative ends of battery. Do not recharge, disassemble or burn the battery, and do not use it together with old battery or batteries of a different kind, so as to avoid leakage or explosion.
- *The battery box is moisture-resistant. Please make sure that fixing screws are tight and offer good sealing effect.

电池的安装和更换


- 电池的安装 1.将连接线取出。
- 2.将防水DC电源插头连接好,并拧紧防水帽。
- 3. 如图所示将电池盒放置合适的位置。 ※电池、连接线有正负极之分,请勿强行插入,否则 会导致产品损坏。如有疑问请致电客服电话或当地经 始宽

电池的更换

1. 松开电池盖固定螺丝,取下CR-P2旧电池并交给专业 机构回收处理。

- 2. 更换CR-P2新电池一节,并如图片所示锁回固定螺丝。
- 3. 参照电池的安装图片,将电池安装到合适位置。 ※电池应放在儿童拿不到的地方。请确认电池正负 极。请勿将电池充电、拆开、火烧,与旧电池或不同 种类的电池混用,以免造成漏液或爆炸。 ※电池息具有防潮功能。请保证固定螺丝拧到位,达 到良好的密封效果。



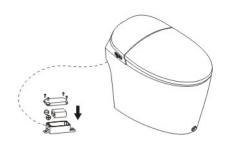

CONFIRMATION OF WATER AND POWER CONNECTION 确认通水、连接电源

- 1. Turn on water supply angle valve to the maximum as illustrated.
- 2. Confirm no water leakage at every joint.
- *If water leaks, please screw the nuts again and reinstall.
- 3. Connect the ground wire.
- 4. Insert the power plug into socket of AC 220V power.
- 1) Confirm whether the power is connected.
- Confirm whether the indicator light of the plug is on. If the light turns off, please try pressing the reset button in the middle.
- 2) When the indicator light of the plug is on, wait until the host completes self-test. Meanwhile, you may see indicator light of the product turns on, cleaner extends out. motor rotates and water flows, which are all normal.
- 3) Press the power button on the side of the smart toilet softly, and confirm that the toilet is on.



2. 确认各连接部位没有漏水。

 
※如漏水,请将螺母类重新拧紧,进行再次安装。


3. 连接地线。

4. 电源插头插入交流220伏特的插座内。 (1) 确认是否接通电源。

确认插头指示灯是否亮起, 如指示灯变暗, 请试按中 间复位开关。

- (2) 插头指示灯点亮后,等待主机完成自检,期间会 看到产品指示灯点亮,清洗器伸出,电机转动和流水 声,均属于正常。
- (3) 轻按智能坐便器侧面电源键,确认智能坐便器处于 开机状态。



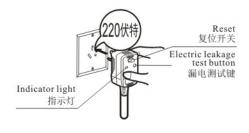

FIXATION


- 1. When the functional test is completed, smooth uneven spots on the ground with objects to steady the ceramic.
- 2. Clean and keep dry where the ceramic touches the
- 3. Use glass glue gun to put glass glue along the bottom of the ceramic.
- XUse the product in 48 hours after the glass glue is spread.
- *The adjustments should be minor, gentle and not too big.

固定产品

- 1. 在产品功能都测试完毕后,对地面不平部分填入填 充物, 使陶瓷不再摇晃。
- 2. 清洁陶瓷与地面接触部分, 保持接触部分干燥。
- 3. 使用玻璃胶枪沿着陶瓷底部打上玻璃胶。

※打上玻璃胶后,请于48小时后再使用。

※在产品调整时注意请小幅度轻轻调整,切不可调整 幅度过大。

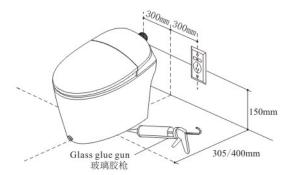

FILTER MAINTENANCE

1. Filter Replacement

For your health, please clean (or replace) the filter in time based on local water conditions.

2. When it is found that the cleaning gets weak, please clean (or replace) the filter promptly. Please turn off water supply angle valve when removing the filter. Besides, while installing the filter, please screw it tightly to prevent leakage.

- 1)Close water supply angle valve
- 2 Rotate 1-dollar coin counter-clockwise to open filter
- 3Clean it with tools like a toothbrush
- * It is recommended that you clean the filter once in 1-2 months.

过滤网的保养

1. 过滤网的更换

为了您的健康, 请根据当地水质情况及时清洗过滤网 (或更换过滤网)

2. 当发现清洗强度减弱时,请及时清洗过滤网(或更 换过滤网)。拆卸过滤网时,请务必关闭供水角阀。 另外安装过滤网时,请用力拧紧,以免漏水。

①关闭供水角阀

- ②用1元硬币逆时针旋转打开过滤网
- ③用牙刷等工具进行清洗

*建议1-2个月清洗一次过滤网



USAGE OF REMOTE CONTROL 遥控器使用

For move the Display high, Button to Adjust the For water water column alternate cold mid, low, and adjust the nozzle position back and forth and hot off temperature temperature back and forth and achieve the cleaning 显示高档、中档、 of cleaning 可以对喷嘴位置 purpose of water 进行前后调节 通过水温冷热 低档、关档温度 清洗时可对水温 washing 交替清洗 可通过喷嘴前后 进行调节 移动进行往复清洗 Press "electricity saving" button to start the state of Remote control saving power button activation 按下节电按键, and deactivation 进入节电状态 遥控器按键背光 点亮 The night lighting 喷嘴位置 Nozzle nsiti is turned on or off. Flush water 移动清洗 冷热清洗 H/C Clean 节电 Power Saving

立体按摩

夜灯照明开启或 关闭 The cleaner is extended for use when the nozzle is cleaned manually

For posterior. feminine, dryer/temp off 臀部清洗停止

暖风/风温停止

可供手动清洁

喷嘴时使用

妇洗停止

For posterior washing 用于清洗臀部

夜灯 Light

喷嘴清洗 Nozzle Clean

For feminine Threewashing dimensional 用于女性私密处 massage 清洗 全方位的3D按摩 效果

The Drver/Temp turned on 按键开启暖风功

Position 喷嘴位置

 \leq

水压

(LED)

数显/灯光 LED On/off

实现脚触灯光开 启/关闭 Flush to cleaning button

便后冲水

pressure adjustment 可调节清洗的水

For adjust the

the seat ring

Achieve foot

touch light

on/off

temperature of

可调节座圈的温



When buttocks cleaning or women cleaning is on, press the button "water pressure +"for increasing water pressure, and press the button "water pressure -"for decreasing water pressure.



臀部清洗或妇洗功能开启时,按"水压+" 键,增加清洗水压,按"水压-"键,减弱 清洗水压。



Press the button "Heater Wind/Air Temperature", and Heater Wind starts and flush once. Each time you press the button "Heater Wind/Air Temperature", the indicator light changes into [Off (no light)], [High (Red Light on)], [Middle (Purple Light on)], and [Low (Blue Light on)]. *Middle level Heater Wind is on by default when Heater Wind is started.



按下"暖风/风温"按键,暖风功能启动 并进行一次冲水。每按一下"暖风/风温 按键显示灯切换为「关档(显示灯熄灭)」 「高档(显示灯红色)」、「中档(显示灯 gual/gual 紫色)」、「低档(显示灯蓝色)」。 ※暖风功能开启时风温默认为中档。 ※暖风具有约4分钟后自动停止功能。



When buttocks cleaning or women cleaning is on, press the button "nozzle position " for moving the cleaning spot forward one level, and press the button "nozzle position " for moving the cleaning spot backward one level.



臀部清洗或妇洗功能开启时 按"喷嘴位置▲"键,清洗位置往前一档,按"喷嘴位置▼"键,清洗位置退后一档。



Under the cleaning mode, press "Hot and Cold Water Cleaning" button to alternate cold and hot cleaning and achieve the purpose of massage. *This function is used only under the cleaning



在清洗模式下按"冷热清洗"键来实现水温 的冷热交替清洗,达到按摩效果 ※该功能只能在清洗模式下才能使用



Under the cleaning mode, press "Mobile Cleaning" button to move the water column back and forth and achieve the purpose of massage. *This function is used only under the cleaning



在清洗模式下按"移动清洗"按键来实现水 柱的前后来回清洗, 达到按摩效果。 ※该功能只能在清洗模式下才能使用



Under the cleaning mode, press "Three-Dimensional Massage" button to move the water column back and forth and alternate both water pressures and temperatures, and achieve the purpose of three-dimensional massage. *This function is used only under the cleaning



在清洗模式下按"立体按摩"按键实现水柱 的前后来回清洗、水压强弱交替清洗、水温 的冷热交替清洗同时进行,达到立体按摩效

*Three-Dimensional Massage includes Mobile Cleaning and Hot and Cold Water Cleaning, so it is invalid to press those buttons under Three-Dimensional Massage mode.



※该功能只能在清洗模式下才能使用。 ※立体按摩包括了移动清洗和冷热清洗,所 以在立体按摩下上述按键无效。



Under the state of power on and user off the seat, press the button "Nozzle Cleaning" on the remote control, and the cleaner extends out automatically. If the nozzle is dirty, hold the cleaner gently on one hand and clean it with a toothbrush with the other hand.



在开机离座状态,按下遥控器上的"喷嘴清 洗"按键,清洗器自动伸出。如果喷孔有污垢,可一手轻轻托住清洗器,一手用牙刷进 ※切勿用力过猛,否则会损坏喷嘴。

Do not apply too much strength, which may damage the nozzle.

Basic Functions



Water spouts from the tip of nozzle to clean buttocks.



基本功能

清洗水流从喷嘴的前端喷出,清洗臀部,



Water spouts from the tip of nozzle to clean the private part of women.



清洗水流从喷嘴的前端喷出,清洗女性私密

电源/停止 智能清洗 智能妇洗 电源/停止 智能清洗 智能妇洗 电源指示灯-

OTHER FUNCTIONS SET 面板功能设定

Power/Stop button

1, Short press the "Power/Stop" to realize to staring it up, long press the "Power/Stop" to realize to power it off. 2. When the "Posterior" or "Feminine" function is running, press the Power/Stop button to half-stopping.

1.短按"电源/停止"按键实现开机,长按"电源/停 止"按键实现关机。

2.智能清洗、智能妇洗功能运行时,按电源/停止按 键,中途停止。

"Posterior" button

After the human body is seated, press the "Posterior" button on the right side, and the product will start in sequence: hip wash for about 90 seconds, warm air function for about 240 seconds, ceramic rinse.

Note: If you press the "Posterior" button again during the cleaning process, fast forward to the warm air function. If you need to stop the "warm air function" in the middle, press the "stop" button of the cylinder/remote control. Stop the warm air function. Separate will not be ceramic rinse again.

人体落座感应后,按下右侧"智能清洗"键,产品依次 启动:臀洗约90秒、暖风功能约240秒、陶瓷冲洗。 温馨提示: 如在清洗过程中再次按"智能清洗"键, 快

如需要中途停止"暖风功能",按缸体/遥控器"停止"按键。停止暖风功能。离座不会再次陶瓷冲洗。

"Feminine" button

After the human body is seated, press the "Feminine" button on the right side, and the product will start in sequence: hip wash for about 90 seconds, warm air function for about 240 seconds, ceramic rinse.

Tips: If you press the "Feminine" button again during the cleaning process, fast forward to the warm air function. If you need to stop the "warm air function", press the cylinder/remote control "stop" button. Separate will not be ceramic rinse again.

人体落座感应后,按下右侧"智能妇洗"键,产品依次 启动:臀洗约90秒、暖风功能约240秒、陶瓷冲洗。 温馨提示: 如在清洗过程中再次按"智能妇洗"键, 快

如需要停止"暖风功能",按缸体/遥控器"停止"按 键。离座不会再次陶瓷冲洗。

Press "Water Temperature" button to adjust the cleaning temperature. Each time you press "Water Temperature" button, the indicator light switches into [Off (no light)], [High (Red Light on)], [Middle (Purple Light on)] and [Low (Blue Light

按下"水温"按键调节清洗水温。每按一下 "水温"键,显示灯切换为「关档(显示灯 熄灭)」、「高档(显示灯红色)」、「中档 (显示灯紫色)」、「低档(显示灯蓝色)」。



Press "Seat Temperature" button to adjust seat temperature. Each time vou press "Seat Temperature" button, the indicator light switches into [Off (no light)], [High (Red Light on)], [Middle (Purple Light on)] and [Low (Blue Light

按下"座温"按键调节座圈温度。每按一下 "座温"键,显示灯切换为[关档(显示灯 熄灭)」、 「高档(显示灯红色)」、「中档 (显示灯紫色)」、「低档(显示灯蓝色)」。

 


Press "Electricity Saving" button to start the state of saving power, press the button again to exit. *Under the state of Electricity Saving, the indicator light for electricity saving on the shortcut keys is on.

按一下"节电"键, 进入节电状态, 再次按一下"节电"键, 解除节电状态。 ※在节电功能开启的状态下, 快捷操作按键 上的节电指示灯会亮。




Press "Nightlight" button, and nightlight lighting is turned on or off.



按下"夜灯"按键, 夜灯照明开启或关闭。



 Press "Remote Flush" button, and the product flushes once.





Press "LED" button, and foot-touch lighting is (LED) Press "LED" turned on/off. 数显/灯光 LED On/off



按下"LED"按键,实现脚触灯光开启/关 LED

-13-

自动冲水 当人体落座后离座会自动进行一次冲水。

Automatic Flush

When the human body leaves the seat after using, the product flushes once automatically.



电源/停止

停电冲水 产品不插电源时,按下"电源/停止"按键。可实现

※以上操作无效时,需要更换电池或联系当地经销

Power-Outage Flush

When the product is unplugged, press "Power/Stop" button to flush during power outage.

XIf the operation is invalid, you need to replace batteries or contact the local dealer.



走近产品并用脚轻触此开关,可以实现冲水功能。 ※着座后无法启用此功能。

Foot-Touch Flush

Come near the product and touch the switch gently with your foot to flush.

*When sitting on the toilet, this function can't be used.



走近产品并用脚轻触此开关

A)脚触第一次: 开启座盖; 然后落座使用;

B)脚触第二次: 开启座圈; 小便或者清洗坐便器

C)脚触第三次: 冲水并关闭座圈再关闭座盖。

Foot-Touch Flip

Come near the product and touch the switch gently with your foot

A) at the first touch: open the cover to sit down;

B) at the second touch: open the seat to urinate or clean the toilet;

C) at the third touch: flush and close the seat and then the cover



Other Functions

Damping Descent

The product offers the function of damping, so as to enable the seat and cover to open and close stably and silently.

其他功能

产品增加阻尼功能,使座圈、座盖平稳起落,从而起 到良好的静音效果。

Anion Deodorization

After you stand up from the seat, Anion Deodorization starts working for about 10 minutes.

负离子除臭

当您从座圈上起身后,负离子除臭开始工作约10分钟 后停止。

Business Model

The product powers off automatically after 24 hours on standby, so as to relieve the user of any worries and avoid unnecessary loss.

本产品会在待机24小时后自动关机,为用户消除后顾 之忧并避免不必要的损耗。

Remote Control Code-Matching

The remote control is matched with the product when shipping and can be used directly. You should match the code again if the remote control doesn't work. Under the state of power off, press and hold down "Wakeup" button on the remote control until the indicator light of temperature starts blinking. Then take the remote control close to the product and turn on power. When all buttons of the product are bright, the code-matching is done. After code-matching, the remote control can only be used with the machine.

一定在2月時,遥控器已于产品完成对码,可以直接使用。如遥控器不能操作则应该重新对码。产品断电状态下,长按遥控器"唤醒按键"直至温度指示灯开始闪烁。此时将遥控器靠近产品并接通电源。当产品所在按键表页时,沿班对码状态 有按键点亮时,说明对码成功。

对码完成后, 遥控器只能和该主机配对使用。

Remote Control Installation

- 1. According to the screw holes in the remote control holder, make two holes of more than 45mm deep on the wall with a 6mm-diameter drill.
- 2. Insert expansion tubes in the holes.
- 3. Put the remote control holder at the fixing holes.
- 4. Use provided expansion screws to fix the remote
- 5. Open the battery cover of the remote control and put in new batteries (3 AA alkaline batteries).
- 6. Place the remote control on the remote control holder. *If the wall is made of special materials (such as wood and fiberboard), please choose an appropriate installation method.
- *The place for remote control installation can't be showered by water easily.
- *Choose a suitable spot to install the remote control holder, which should enable you to reach the remote control easily while sitting on the smart toilet.
- *Confirm the product is not obstructed by anything around.


遥控器安装方法

- 温注部及表介层 1.根据遥控器支架螺钉孔的位置,用直径6mm的钻头在墙上钻两个深度大于45mm的孔。 2.在孔中装入膨胀管。
- 3. 将遥控器支架放置在固定孔上。
- 4. 用所配置的膨胀螺钉固定遥控器支架。
- 5.将遥控器电池区后盖打开,换上新的电池(5号碱性电

6.把遥控器放置在遥控器支架上。

- ※如果安装墙面是特定材料(比如木板、密制板等) 时,请使用合适的固定方法。
- ※遥控器安装的位置应该是不易被水淋到的地方。 ※选择一个合适地方安装遥控器支架,这个地方应该 是当你坐在智能坐便器上时很容易用手操作到遥控器
- ※确认产品周围没有障碍物。



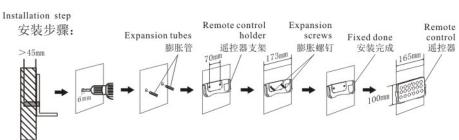

PRECAUTIONS

- 1.Before using, please check whether the grounding of the power outlet connected to the toilet's plug is reliable.
- 2. The product uses AC 220V 50Hz power.
- 3. Prohibit stepping on the product or striking it with heavy objects.
- 4. Place the product far away from fire, and do not inject water to the product or wipe the surface of plastic components with gasoline and chemical solvents.
- 5. Children should use the product under supervision of an adult, refraining from using the product alone.
- 6.Do not unplug the power cord with wet hands or pull the power cord forcibly.
- 7. When out of service for a long time, please unplug the power cord from the socket. Meanwhile, drain remaining water in the product to prevent freezing in winter.
- 8. When there is a fault, please stop using the product immediately, and unplug the power cord, letting maintenance staff or specialists repair it.
- 9. During power outage, unplug the power cord, and close the angle valve to prevent leakage.

注意事项

- 1.使用前应检查与本便座插头连接的电源插座应可靠接
- 2.产品使用额定电压为220V, 频率50Hz的交流电源。 3.产品严禁人员踩踏或重物撞击。
- 4.产品远离火源,严禁向产品注水及汽油和化学溶剂擦 洗塑料件表面。
- 5.儿童应在成人监护下使用,避免让儿童单独接触产
- 6.请勿用湿手插拔电源插头或用力拉扯电源线。
- 7.长期不用时,应将电源插头从插座上拔下。同时将产 品内部积水排净,以防冬天结冰。
- 8.产品出现故障应立即停止使用,取下电源插头,由维 修部或专业人员修理。
- 9.当突然停电时,请拔掉电源插头,关闭角阀,防止漏

CLEANING AND MAINTENANCE

Notes before Maintenance

Confirm the power cord is unplugged Do not allow water inside the product during maintenance

Power Plug Inspection

The power plug is susceptible to accidents. Please examine it regularly (once a month) Examine whether the plug is in good contact with the socket and keep them clean.

Press "Leakage Test" button, and the "Reset" button may trip promptly to cut off power. Press "Reset" button to restore power supply.

Examine and Clean the Machine Regularly

Please examine the toilet and clean dirt around the heater wind hole and cleaner regularly, so as to prevent it from spreading inside and corroding internal parts, which may reduce insulation and lead to electric leakage.

Toilet Cleaning and Maintenance

Use soft and cozy cloths to wipe the product. Wipe only after soaking the cloth in the water and wrenching it dry. Please apply neutral detergent to clean the dirt on the toilet in time. If the dirt is not cleaned promptly, it may crust on the surface and may not be cleaned easily.

Ceramic Maintenance

Do not clean it with hot water, which may damage the

Do not use acidic detergent or disinfectant to clean the toilet.

Please clean the toilet with neutral detergent.

When out of service for a long time, please drain the water inside the toilet and hose.

Do cut off water trails and power when letting out the

Based on water conditions, examine the filter regularly after using the product for a while.

清洁保养

保养前的注意点

请确定已拔掉电源插头。 保养过程中切勿令水进入产品内部。

电源插头容易引发事故,请务必进行检查(一个月一

检查插头与插座是否接触良好, 保持插头插座清洁干

按漏电测试键, 复位按钮应立即跳闸切断电源, 按复 位键可恢复供电。

定期检查和清洁机器

情定期检查和清洗暖风口及清洗器四周的污垢,以免 向机内扩散,腐蚀机内部件并造成绝缘性降低,引发 漏电现象。

便座的清洁保养 用温润柔软的布擦拭, 需将软布侵湿后拧干, 才可擦 拭。请使用中性洗涤剂及时清理便座上的污垢, 如果 不能及时清理,污垢会干结在便座表面,难以清理。

陶瓷部分保养

请不要使用热水进行清洗,可能导致坐便器的损坏。

请不要使用酸性洗涤剂、消毒剂清洗坐便器。

请使用中性洗涤剂对坐便器进行清洗。

长期不用时,请将坐便器内部及软管里的水放干净。

放水时请务必切断水路和电源。

用过一段时间后, 根据水质情况, 定期检查过滤器。

FAULT ANALYSIS AND SOLUTION

故障分析和处理

Phenomenon	Cause	Solution
Product doesn't work	Check if plug/socket is loose	Examine circuit
W . 1 2	Check if water supply is normal	Wait until water supply is restored
Water doesn't come out from nozzle	Check if inlet filter is blocked	Clean the net or replace filter
nozzie	Check if inlet pipe is twisted	Straighten the inlet pipe
Water spouts irregularly	Abnormal operation	Turn on after unplugging for 1min
Dripping at cleaner	Invalid solenoid valve	Ask specialist to repair
Cold seat	Check if seat temperature is set at Off level	Adjust seat temperature by referring to the manual
Quick fall of cover/seat	Invalid damping descent	Ask specialist to repair
Remote control doesn't working	Low battery	Replace batteries

Note: If the power cord is damaged, you must replace it with a special power cord with leakage protection device. To avoid danger, please ask specialists of the manufacturer or authorized maintenance departments or other qualified staff to replace it.

现象	原因	处理
产品不工作	检查是否有电/插座是否松动	请检查电路
	检查是否停水	待供水恢复
喷不出水	检查进水过滤网是否被堵死	清洗过滤网或更换过滤网
	检查进水管是否折曲	排除进水管折曲
喷头乱出水	异常操作	拔出插头一分钟后重新通电
清洗器常滴水	电磁阀失效	请专业人员维修
座圈不暖	检查座圈温度是否设在关闭档	参照说明书调节座温
座盖/圈下落过快	阻尼缓降功能失效	请专业人员维修
遥控器失灵	电池电量不足	更换电池

注:如果电源线损坏,必须用带漏电保护器的专用电源线来更换,为避免危险,必须由生产厂家或特约维修部或具有类似的专职人员来更换。

THREE-YEARS WARRANTY

This product is warranted for three years from date of purchase. Our company will be responsible for any problems caused by manufacturing defects provided with the invoice. Our company will at its election, repair. replace or make appropriate adjustment where our company inspection discloses any such defects occurring in normal usage within three years after purchase.

The warranty, including products, is limited clearly. Our company is not responsible for other damages appeared after the warranty. Also, the warranty does not cover problems arising from labor charges, incorrect use and installation.

三年有限担保

本产品自购买之日起,对正常使用下的制造和质料上的瑕疵提供三年的质量担保。在质保期内,凭购货发 票,我司将免费承担由制造质量引起的任何问题。经 核查后, 我司有权决定是修理, 更换, 还是做适当的

这里的担保,包括产品都已明确地限制在该担保期内。 我司对以后出现的损坏不负有任何责任。担保也不包 括外观损伤,使用不当及未按说明书安装造成的损失。

Shanghai Kohler International Trade Co., Ltd. Address: Room 324, Building 2,106 Xinlin Rd, Waigaoqiao Free Trade Zone, Shanghai

Tel: 400-920-8262 Postcode: 200131

上海科勒国际贸易有限公司

地址:上海市外高桥保税区新灵路106号2号楼324室

电话: 400-920-8262

邮编: 200131

保修		

			70 77	
机型			序号	
售机日期		安装日期	发票号	
最终用户信息				
联系人		联系电话	邮编	
联系地址				
经销商信息				
经销商			电话	
地址			邮编	
(经销商盖章方	能生效)		注: 此证为保修凭	证,请妥善保管
VSE WINDER TO	BG_L/X/		11. 20 m/ 7 m/ 5/1	
维修记录	由维修人员填写			
第一次送修日		交付日		
损坏情况,原因	, 处理情况			
1				
第一次送修日 损坏情况,原因		交付日		


	_			
机型			序号	
售机日期		安装日期	发票号	
具め田立た自				
最终用户信息		W 7 L 17	dure tobs	
联系人		联系电话	邮编	
联系地址				
经销商信息				
经销商			电话	
地址			邮编	
(经销商盖章)	方能生效)		注: 此证为保修凭证, 请妥善	保管
(PLL 110)-0 JIII - 1-7	V III COLLAND			P1-12
安装记录	由安装人员填写			
安装日期		安装人员签字		
安装记录	-			
Z ACILA				
配件名称				
101111111111111111111111111111111111111				
费用合计	T			
立具字准字成	使用状态良好			
) 阳女衣元成,	使用状态区对			
			100 pla 100 pla	
1			客户签字:	

注: 填写完成请回传总公司

保修卡(公司留存联)

长丽 KARAT。 维修零件图 SERVICEPARTSPAGE

维纳斯一体化智能坐便器305mm/400mm坑距 VENUS INTELLIGENT INTEGRATED TOILET305mm/400mm RI 24999T-M-WK/25059T-M-WK

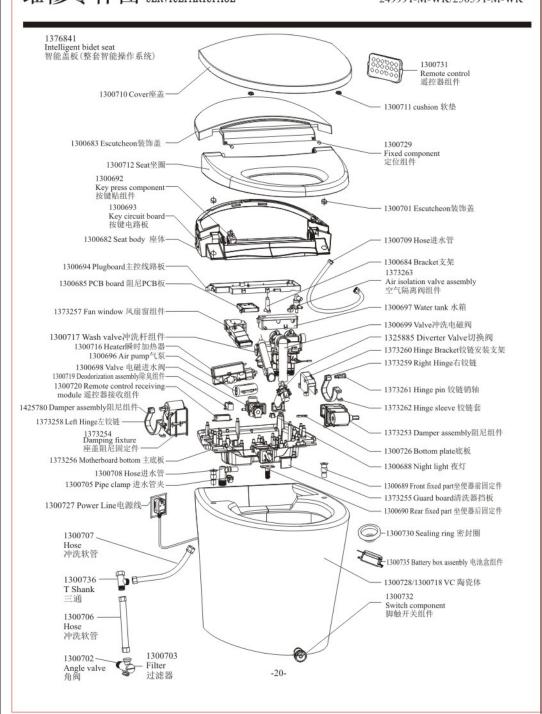

ENVIRONMENTAL PROTECTION

环保说明

- 根据中华人民共和国《电器电子产品有害物质限制使用管理办法》的相关规定和要求,提供如下包括电子产品部品名称及有害物质的样式。
- 在当前技术水平下,所使用有害物质的含量控制到了最底线。本公司会继续努力通过改进技术来减少这些物质的使用。
- 本产品的"环保使用期限"为10年,其表示如右图所示。
 可更换部件的环保使用期限可能与产品的环保使用期限不同。只能在本说明书所述正常情况下使用本产品时,"环保使用期限"才有效。

		产品	中有害物质的	的名称及含量			
			7	有害物质			
部件名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 Cr(VI)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)	备注
控制装置	×	0	0	0	0	0	
线材及连接器	0	0	0	0	0	0	
外壳组件	×	0	0	0	0	0	
加热装置	×	0	0	0	0	0	
烘干装置	×	0	0	0	0	0	
清洗装置	×	0	0	0	0	0	
水路组件	×	0	0	0	0	0	
标签类	0	0	0	0	0	0	

本表格依据SJ/T 11364的规定编制。

- O:表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572标准规定限量要求以下。
- ×:表示该有害物质至少在该部件某一均质材料中的含量超出GB/T 26572标准规定的限量要求。
- 上述 "X"标识的部品现阶段没有可替代的技术和部件,且符合国家《电器电子产品有害物质限制使用管理办法》的法规要求。

WATER EFFICIENCY TABLE

水效表

本公司坐便器产品水效等级符合《GB 25502-2017坐便器水效限定值及水效等级》的要求,参考指标如下:

坐便器水效等级	1级	2级	3级
坐便器平均用水量	≤4. 0L	≤5. 0L	≤6. 4L
双冲坐便器全冲用水量	≤5. 0L	≤6.0L	≤8.0L

注:每个水效等级中双冲坐便器的半冲平均用水量不大于其全冲用水量最大限定值的70%。

※您所购买产品的用水量及水效等级请以产品上的标识为准。