

Change Record 变更记录


| | |
|------|--------------------------|
| 修改说明 | Modification description |
|------|--------------------------|

| | | | |
|----|------|------|--|
| 版本 | 修改日期 | 修改原因 | |
| | | | |
| | | | |

卡丽 KARAT[®]

安装使用说明书 INSTALLATION INSTRUCTIONS

欧申纳斯一体化智能坐便器, 305mm坑距/400mm坑距
OCEANUS INTEGRATED IT, 305mm/400mm RI
31901T-WK/31902T-WK

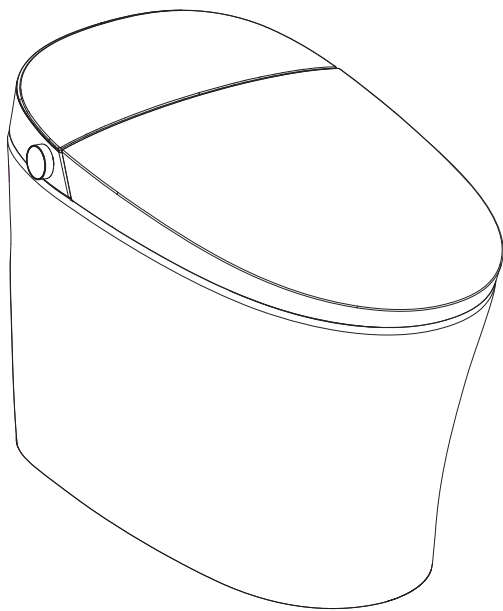

CONTENTS

目录

| | |
|---|----|
| 安装之前Before Installation..... | 1 |
| 产品简介Introduction..... | 2 |
| 功能Function..... | 2 |
| 安全注意事项Safety Precautions..... | 3 |
| 技术参数Technical Parameters..... | 7 |
| 尺寸图Dimensions..... | 8 |
| 安装尺寸图Installation Drawing..... | 8 |
| 整体图说明Introduction to Overall Diagram..... | 9 |
| 产品安装Installation..... | 9 |
| 确认通水、连接电源 Confirmation of water and Power Connection | 12 |
| 脚感应功能Foot sensing function..... | 13 |
| 启动泡沫盾 Activate foam shield..... | 13 |
| 主机旋钮功能说明 Functions of Knob..... | 14 |
| 显示屏LED灯说明LED display description..... | 15 |
| 遥控器使用 Usage of Remote Control..... | 16 |
| 安装遥控器 Remote Control Installation..... | 21 |
| 日常保养 Daily Maintenance..... | 22 |
| 过滤阀芯的保养Filter Maintenance..... | 23 |
| 紧急情况 Emergency Troubleshooting..... | 23 |
| 故障分析和处理 Fault Analysis and Solution..... | 26 |
| 联系信息 Contact Information..... | 27 |
| 环保说明 Environmental Friendliness..... | 28 |
| 能效水效等级说明 Grade of Energy Efficiency and Water Efficiency..... | 28 |

卡丽 K A R A T[®]

安装使用说明书 INSTALLATION INSTRUCTIONS

BEFORE YOU BEGIN 安装之前

- Please read these instructions carefully to familiarize yourself with the required tools, materials, and installation sequences. Follow the sections that pertain to your particular installation. This will help you avoid costly mistakes. In addition to proper installation, read all operating and safety instructions.
- All information in these instructions is based upon the latest product information available at the time of publication.
- These instructions contain important care, cleaning, and warranty information-**Please leave instructions for the consumer.**
- Obey all electrical regulations in force at the time of installation.
- ⚠ **Warning! Risk of personal injury and product damage.** Toilet are very heavy and should not be lifted or installed by just one person.
- 请仔细阅读本指引，以便熟悉所需工具、物料及安装程序。请遵照适用的章节来安装本产品，以免安装失当导致不必要的损失。除了有关正确的安装方法之外，请务必详阅所有操作及安全指引。
- 本指引所载之一切资料，均以印刷时所有之最新产品情况为基础。
- 本指引也包含了有关保养、清洁及担保等重要资料-**请交予用户保存。**
- 遵循当地所有的电器安装规定。
- ⚠ **警告！小心人身伤害和产品受损。**坐便器较重，安装时请勿一人操作。

SAFETY: WARNINGS

- Products are precision engineered and should give continued superior and safe performance, provided:
1. They are installed, commissioned, operated and maintained in accordance with the recommendations given in this Manual.
 2. Periodic attention is given, as necessary, to maintain the product in good functional order. Recommended guidelines are given in the **MAINTENANCE** section.
- Carefully inspect the new fixture for any signs of damage.
- When installing Products, manufacturers guidelines for power tool safety should be followed.

安全：警告

- 产品经过精确制造，性能卓越，经久耐用。为保证产品品质，您必须：
1. 按照此手册中推荐的方法进行安装、启动、操作及维护。
 2. 如有需要，定期检查，令产品保持良好性能状态。日常维护章节中列有推荐方法。
- 仔细检查新产品是否有损伤。
- 在安装产品时，必须遵循制造商有关电动工具的安全指令。





 




TOOLS AND MATERIALS

Pencil Measuring Tape Level Miter Box Safety Glasses Drill Screwdrivers Hole Saw

工具及材料

铅笔 卷尺 水平尺 钻子箱 安全眼镜 手枪钻 螺丝刀 孔锯

产品清单

| 产品 | 遥控器 | 安装纸板 | 密封圈 | 说明书 |
|---|---|---|---|---|
| X1 | X1 | X1 | X1 | X1 |
|  |  |  |  |  |
| 角阀 | 7号电池 | 加液漏斗 | 专用泡沫剂 | |
| X1 | X1包 | X1 | X1 | |
|  |  |  |  | |

INSTRUCTION

产品简介

This product has the function of warm water cleaning, DRY, seat ring heating, foot sensing function, cleaning intensity adjustment, night light lighting and other functions, and the seat ring temperature, cleaning temperature can be adjusted according to demands.

本产品具有温水清洗、暖风、座圈加热、脚感功能、清洗强度调节、夜灯照明等功能，座圈温度、清洗温度，可根据需要进行调节。

FUNCTION

功能

| Functions 功能项目 | | OCEANUS Function Introduction/欧申纳斯功能介绍 |
|------------------------------|---|--|
| | | 31901T-WK/31902T-WK |
| Basic functions 基本功能 | Rear cleaning/臀洗 | ● |
| | Front cleaning/妇洗 | ● |
| | Seat heating/座圈加热 | ● |
| | Drying/暖风功能 | ● |
| Well-being functions 舒适功能 | Wind temperature adjustment/风温可调 | ● |
| | Water temperature adjustment/水温可调 | ● |
| | Seat temperature adjustment/座温可调 | ● |
| | Instant heated 即热式加热 | ● |
| | Move cleaning 移动清洗 | ● |
| | Foam shield 泡沫盾 | ● |
| | Water volume adjustment 清洗流量可调 | ● |
| | Spray cleansing location adjustment 清洗位置可调 | ● |
| | Spray nozzle disassemble 喷嘴可拆卸清洗 | ● |
| | Nozzle cleaning 喷杆自洁 | ● |
| | Remote control 遥控操作 | ● |
| | Side knob control 侧旋钮控制 | ● |
| | Mechanical push button flush/无电按钮冲水 | ● |
| | Automatic pre-wetting button/自动预湿润 | ● |

| Functions/功能项目 | | 31901T-WK/31902T-WK |
|-----------------------------------|--|---------------------|
| Intelligent technology 智能科技 | Seat sensor/着座感应 | ● |
| | Foot sensing function/脚感功能 | ● |
| | Automatic flushing 离座自动冲水 | ● |
| | Induction night light 光感夜灯 | ● |
| | User ID setting 用户对码设置 | ● |
| Safety 安全 | Antibacterial Seat 抗菌座圈 | ● |
| | Antibacterial Spray nozzle/抗菌喷嘴 | ● |
| | Leakage protection switch/漏电开关 | ● |
| | Automatic pressure discharging/泄压保护 | ● |
| | Heated burning protection/防低温烫伤 | ● |
| | Triple protection 三重保护 | ● |
| Rough-in distance (mm) 坑距 (mm) | | 305/400 |

NOTICE

安全注意事项

In order to avoid injury and property damage to you and others, you must follow the following notes of safety precautions:

Dangers caused by ignoring following warnings or incorrect use fall into two types.



Warning: Violation of Warning precautions may lead to serious injury or death.



Attention: Violation of Note precautions may lead to injury or property damage.

为了避免对您和他人造成伤害和财产损失，请您务必遵守如下有关安全方面的注意事项：

无视如下警示，因错误的使用方法而产生的危害分为两级。



警告：违反警告事项时，可能会造成人的死亡或重伤。



注意：违反注意事项时，可能会造成人的伤害或财产的损失。

WARNING



- The product requires 220V~50Hz power. Make sure that the power supply is consistent with the rated voltage and reliable grounding exists within the three-pin socket, so as to avoid electric shock or damage to the product.
- Must use 10A electrical outlet. It is recommended to use a water-proof electrical outlet.

警告



- 本产品要求电源为220V~50Hz，请确保电源与本机额定电压相符，保证三芯插座内有可靠的接地，以免触电或损坏产品。
- 必须使用不小于10A插座，最好使用防水插座。



A power circuit breaker should be connected in series with the power supply circuit in the same room; Otherwise there may be a risk of personal injury or property damage.



安装本产品时，应在安装产品同一房间的电源进线回路中串联一个能使本产品电源全级断开的分断装置方可安全使用；否则本产品的意外故障可能会导致生命危险或财产损失。



The old aging water supply hose can not be used, otherwise it might cause leakage, fire or electrical shock. Installation of the bidet seat should include specified components and new water supply hose.



安装应使用随器具附带的新软管组件及其它附带或指定的零部件，旧软管组件不能重复利用，否则可能引起漏水、火灾或触电。



Do not use bad electrical outlet or damaged power plugs, and use and protect the power cord property, so as to avoid risks of electric shock or fire due to bad contact or damage.
If the power cord is damaged, it must be changed by specialist of the manufacturer, its maintenance department or other similar departments, or electric shock or fire may occur.



请勿使用不良的电源插座及破损的电源插头，请正确使用并保护好电源线，以免接触不良，破损等导致触电或引发火灾等危险。

如果电源软线损坏，为了避免危险，必须由制造商、其维修部或类似部门的专业人员更换，否则容易引起触电、火灾。



Do not disassemble, repair or modify the product by yourself, so as to avoid electric shock, fire, electric leakage or other faults.



严禁自行拆卸，修理或改造产品。以免造成触电，火灾，漏电或其他故障。



Do not throw cigarettes and other burning stuff into toilet, otherwise it might cause fire.



点燃的香烟及其它燃烧物不能投入坐便盖内，否则可能会引起火灾。



WARNING:
There is risk of electric shock. This product must be grounded safely, can only connect to exclusive 220V~, 50Hz, 10A circuit which protected by Ground-Fault Circuit-Interruption (GFCI's) or Earth-Leakage protector.



警告：
产品存在电击的危险。本产品必须可靠接地，只能连接到专用的220V~，50Hz，10A带接地故障断路器或接地漏电保护器的电路中。



Do not use plugs with loose power outlet, do not put the body of the product and plugs in the water or shower them with water, and do not use the product under excessively humid condition, so as to avoid electric shock or fire. When power failure occurs, immediately unplug the power cord and contact maintenance staff.



请勿使用插头配合松动的电源插座，请勿将本体和插头放在水里或淋水，请勿在过于潮湿的环境下使用，以免造成触电或火灾。电源出现故障时请立即按下电源插头并联系维修人员。



Children, elders or those with disabilities from their body, sensitivity or mental disabilities or lacking of common sense should not use or get close to this product unless under close tutelage.
Children are not allowed to use or touch this product. Do not leave children alone in a room with such product. For those children and the elderly who are unable to adjust the temperature, they should ask for help to adjust seat temp, flush temp and wind temp of bidet seat to the proper gears.
Exposed skin should not make contact with the heated seat for too long a time to prevent low temperature burning.



当儿童、老年人、残疾人、以及身体、感知、智力能力缺陷或经验和常识缺乏的人使用或靠近此产品时，近距离的监护是必需的。
儿童不应该被允许使用或接触此产品，不要让儿童独自待在安装有此产品的房间，儿童不应玩耍器具。
对于无法自己进行温度调节操作的儿童和老人，需要帮助将便盖的圈温、冲水温度及风温调节到合适的档位。
请避免长时间让裸露的皮肤接触加热座圈，以免低温灼伤。



When the product moves from cold or wet environment into normal room temperature, wait for 2 hours until the condensation water is fully volatilized. Doing so can prevent the product from electrical short-circuit.



当产品由寒冷或潮湿的地方搬至室内时，先放置2小时，使机内凝水充分挥发，再开机使用，以免造成产品短路。



Do not handle the electrical plug with wet hands. Doing so may cause electrical shock.



严禁用湿手触摸电源插头，否则可能会引起触电。



It is prohibited to use other electric appliances in the same socket.



严禁在同一插座上使用其他电器。



It is forbidden to use the power extension or unstable loose outlet, otherwise it may cause fire or electrical shock.



严禁使用电源延长线或松脱不稳的电源插座，否则可能会引起火灾或触电。



Do not put hand or other staff over the outlet of air dryer or block the outlet of air dryer. Doing so may cause burn and electrical shock.



请勿用手指或其他物品放入或者堵塞暖风出口，否则可能会引起烫伤、触电或烧毁。



Do not lay on side or upside the product during the electrical circuit, to avoid fire or burning.



产品通电时，不得将产品侧放或倒置，否则可能会引起火灾或烧毁。



Prohibit stepping on the body and cover of the machine and prohibit putting heaters or heavy objects on the unit and cover, power cord of the machine, so as to avoid electric shock or other injuries and damage.



严禁踩踏机器本体和便盖，严禁把加热器或重物放在机器本体、便盖、电源线上，以免造成触电或其他伤害和损坏。



In the same room where the product is installed, it is necessary to install a water stop valve at the accessible position. In case of emergency, the water inlet can be cut off without using any tools. Otherwise, the unexpected failure may lead to the loss of users.



在安装本产品的同一房间中，需要在触手可及的位置安装一个止水阀，用于紧急情况下，无需借助工具即可切断本产品的进水路；否则本产品的意外故障可能导致用户损失。



For models with foam shield function, do not run the foam shield function without foam agent; otherwise, the service life of the foam shield may be shortened.



若带有泡沫盾功能的机型，请勿在未装有“泡沫剂”的情况下运行泡沫盾功能，否则可能缩短泡沫盾使用寿命。



Please unplug the power cord when it thunders. When out of service for a long time, please cut off water and the circuit and drain water within the product. Do not put the body of the product near heaters or fireplace, which may deform and discolor it. Please prevent the sun from shining directly on the product, which may discolor the product.



在打雷时请将电源线插头拔掉。长期不用时，请将水电路切断，并将产品内部积水排净。请不要把取暖器或壁炉等产品靠近本体，否则会导致本体变形，变色。防止日光直接照射，否则会引起产品变色。



Make sure that the water supply is clean tap water. Do not use contaminated or industrial water.



请确保使用的水源是干净的自来水，不可使用污染的水源或工业用水。



Do not urinate on the nozzle of the cleaner to prevent filth blocking, and do not urinate into the outlet of heater wind to avoid corrosion and electric leakage.



请勿将小便淋于清洗器的喷嘴上以免产生污垢导致堵塞，或将小便射进暖风出口位置，以免产生腐蚀而导致漏电。



Do not use the product in the places close to bathtub or water tank. Do not touch the product that has fallen into liquids, immediately pull out the power plug.



请勿将产品放置在可能掉入或被拉入浴缸或水槽的位置。请勿触及已经掉入水中或浸水的产品，并立刻拔掉电源插头。

| | | | |
|--|--|---|---|
|  | Do not reverse the product to use, which damages the product. |  | 请勿将产品翻转使用，否则会损坏产品。 |
|  | Please don't plunge into toilet bowls with easily blocked items such as newsprint, paper diapers, and sanitary napkins. |  | 请不要向便器内冲入新闻纸、纸尿裤、妇用卫生巾等容易堵塞的物品。 |
|  | Please do not use gravity to impact the ceramic to prevent damage. |  | 请不要用重力撞击陶瓷，以防止破损漏水。 |
|  | Please do not embed cementations materials (cement mortar, etc.) on toilet seats to prevent them from swelling due to swelling. |  | 请不要在便器底座埋入胶凝材料（水泥砂浆等），以防止因膨胀而撑裂便器。 |
|  | Do not strike the product. |  | 请勿撞击产品。 |
|  | Do not use lacquer thinner, petrol, liquid medicine, detergent, insecticide, toilet cleanser and scrubbing brush to clean the product. |  | 禁止使用香蕉水、汽油、药水及洗涤剂、杀虫剂、厕所清洁剂和硬毛刷清洁本产品。 |
|  | This product is equipped with a soft-closing seat cover. Do not push the toilet seat closed, or damage may occur. |  | 本产品座圈有缓降功能，请勿用力按压，以免损坏缓降器。 |
|  | Do not lean against the seat cover when using the product, to avoid damage. |  | 使用产品时，请勿向后靠在便盖上，以免损坏产品。 |
|  | Do not twist and break the water inlet pipe. |  | 请勿将进水管扭曲破损。 |
|  | In winter, when the product is transported over a long distance or kept for a long time, the remaining water in the product may freeze. To prevent damage caused by freezing, please adopt measures to fight against freezing. |  | 在寒冷的冬季，当产品在经过长途运输或长时间存放时，产品内剩下的积水可能会发生冻结现象。为预防冻结造成损坏，请采取防冻措施。 |
|  | Please do not use in environments below 1°C. |  | 请不要在1℃以下环境中使用。 |
|  | When installing, disassembling, repairing, and maintaining the product, you must unplug the power supply and close the water supply valve. |  | 进行安装、拆卸、维修及保养产品时，必须拔下电源插头，关闭供水阀门。 |
|  | CAUTION: There is risk of hazardous gases. If a new toilet is not installed immediately, a piece of rag can be temporarily covered over the ground outfall. |  | 谨慎： 存在有害气体的危险。如果新坐便器不能立即安装，可在地面排污口上临时遮盖一块旧布。 |
|  | NOTICE: Receptacles installed in bathroom to be located at least 1 meter from a bathtub or shower if practical. Observe all local plumbing and building codes. Carefully inspect the new toilet for damage. |  | 注意： 安装在浴室内的插座位置距离浴缸或淋浴喷头至少应为一米。 遵守所有的本地管道安装规程和建筑规范。仔细检查新坐便器有无损坏。 |

| | |
|---------------------------|--|
| Rated pressure | 220V~,50Hz |
| Rated power | 990W (As for the test condition and standard, please refer to the upper part on page 8.) |
| Overall unit Waterproof | IPX4 |
| Water pressure range | Static pressure 0.14MPa (dynamic pressure 0.09Mpa)-- Static pressure 0.8MPa |
| Cleansing flow | The maximum Rear washing is not less than 450mL/min |
| Electrical wire | length is about 1.2m |
| Flush volume(L) | 4.8L(Full Flush 6.0L/Half Flush 4.2L) |
| Flushing mode | Siphonic jet |
| Outlet outside diameter | ≤100mm |
| Drainage method | Down-drain |
| Washing settings | |
| Heating power | 1500W |
| Water temperature | 6 different level adjustment |
| Water volume | 3 different level adjustment |
| Cleansing mode | Rear washing/ Move washing, Feminine washing/ Move washing |
| Spray cleansing location | 5 different level adjustment |
| Water pressure protector | Pressure stabilizer, Automatic pressure discharging |
| Anti-fouling device | Automatic cleansing nozzle, Anti-syphon device, Anti-backflow device, Filter device |
| Safety device | Thermal fuse, Water temperature sensor, Ground protection, Thermostat, Over temperature protection , Leakage protection plug |
| Heater Wind Device | |
| Warm wind speed | Over 0. 2m³/min |
| Warm wind temperature | 6 different level adjustment |
| Heating power | 200W |
| Safety device | Thermal fuse, Temperature sensor, Thermostat |
| Seat Heating Device | |
| Surface temperature | 6 different level adjustment |
| Heating power | 50W |
| Heated burning protection | The seat temperature will automatically lower to level 1 in 10 minutes after using |
| Safety device | Sensed area, Temperature sensor, Thermal fuse, Bimetal thermostat, Leakage protection plug |

| | |
|-----------|------------------------------------|
| 额定电压 | 220V~, 50Hz |
| 额定功率 | 990W(具体测试条件及参数请参考第八页上半段) |
| 整机防水 | IPX4 |
| 水压范围 | 静压0. 14MPa (动压0. 09Mpa) —静压0. 8MPa |
| 清洗流量 | 臀洗高档不小于450mL/min |
| 电源线 | 长度约1. 2米 |
| 平均用水量 (L) | 4. 8L (大冲6. 0L/小冲4. 2L) |
| 冲洗方式 | 喷射虹吸式 |
| 排污口外径 | ≤100mm |
| 排水方式 | 下排水 |
| 清洗装置 | |
| 加热功率 | 1500W |
| 温水温度 | 6档调节 |
| 清洗流量 | 3档调节 |
| 清洗方式 | 臀洗/移动清洗, 妇洗/移动清洗 |
| 喷洗位置 | 5档调节 |
| 水压保护 | 稳压装置、自动泄压装置 |
| 防污装置 | 喷嘴自动清洗装置、防虹吸装置、防倒流装置、过滤装置 |
| 安全装置 | 温度保险丝、水温传感器、接地保护、温控器、过温保护、漏电保护插头 |
| 暖风装置 | |
| 暖风风量 | 大于0. 2m³ /min |
| 暖风风温 | 6档调节 |
| 加热功率 | 200W |
| 安全装置 | 温度保险丝、温控器、漏电保护插头 |
| 暖座装置 | |
| 表面温度 | 6档调节 |
| 加热功率 | 50W |
| 防低温烫伤 | 使用10分钟后, 座温自动缓慢降低到低档 |
| 安全装置 | 着座感应器、温度传感器、温度保险丝、温控器、漏电保护插头 |

| Others | |
|-----------------------------|--|
| Night light assembly | Intelligent, Often in the off state, Normally on |
| User ID setting | To avoid disturbance from remote controls by multi-user |
| Automatic flushing | Toilet will automatically flush as user walks away from bowl |
| Feet flush sensing function | With Foot sensing flush function |
| Power off flush | Toilet will washed manually after power failure |

| 其他 | |
|--------|-------------------|
| 夜灯设置 | 智能、常灭、常亮 |
| 用户码设定 | 防止多台产品多个用户使用，互相干扰 |
| 自动冲水功能 | 可实现便后自动冲刷功能 |
| 脚感冲水功能 | 可实现脚感应冲水功能 |
| 断电冲水功能 | 可实现断电后手动冲刷马桶功能 |


额定功率：本产品环境温度23℃，进水静压0.18MPa±0.02MPa，进水温度15℃条件下，开始上电开机，依次将水压、座温、水温设置为最高档后，立即开启臀洗并打开移动按摩和脉冲按摩功能，持续稳定工作一个清洗周期的平均功率。

本产品符合GB/T 23131-2019标准中的清洁率要求。本产品最佳清洁率测试方法：将喷杆位置调至最前端，水压档位调至最大档，同时开启移动清洗功能。

抗菌：含无机系抗菌材料的座圈长期抗菌，抑制产品表面的细菌生长，这一加工处理不代表防霉等附带效果。抗菌率大于90%（依据GB21551.2-2010进行试验。测试机构：威凯检测技术有限公司。）

ROUGHING

尺寸图

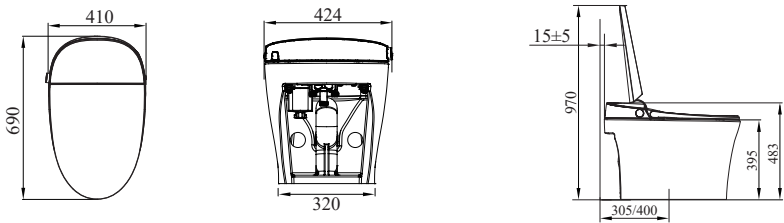


Unit:mm
单位:mm

*The size is for reference only, please check the actual size before installation.

*此尺寸仅供参考，安装前请仔细测量实际产品。

INSTALLATION DRAWING

安装尺寸图

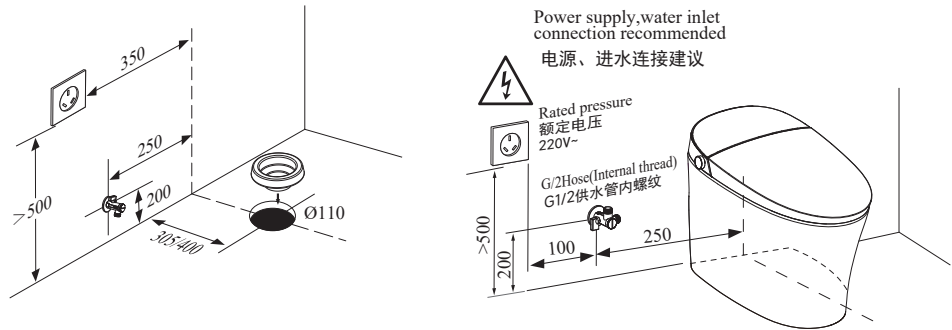


Unit:mm
单位:mm


*The size is for reference only, please check the actual size before installation.

*此尺寸仅供参考，安装前请仔细测量实际产品。

产品左侧面 Left side

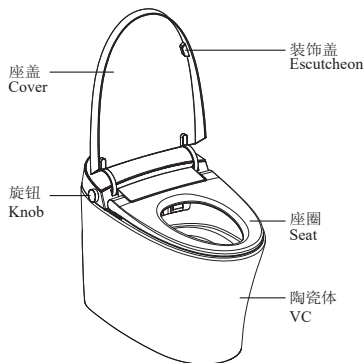

产品右侧面 Right side

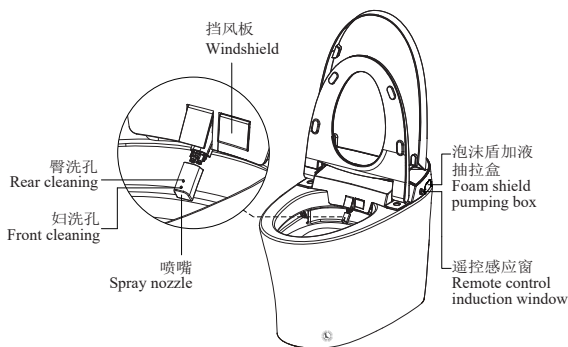

INSTALLATION

产品安装

⚠ Precaution before installing

Minimum static water pressure: 0.14+MPa (15+L/min), failure to meet this pressure will not achieve the best flushing effect.

Remark: Apply the methods below if you don't have water pressure testing device.

| | |
|--------------------|------------------|
| Angle valve type | Water volume 10s |
| Mating angle valve | More than 2.5L |

Reaching appointed water volume represents it meets water pressure requirement.


⚠ 安装前注意事项:

- 最低静态工作压力: 0.14MPa 以上 (15L/min 以上), 未能满足此压力将无法达到最佳冲刷效果。

注: 若无水压测试装置, 可参照下述方式。

| 角阀类型 | 水量 (10秒) |
|------|----------|
| 配套角阀 | 2.5L 以上 |

达到表述水量, 则可确保产品最低水压。

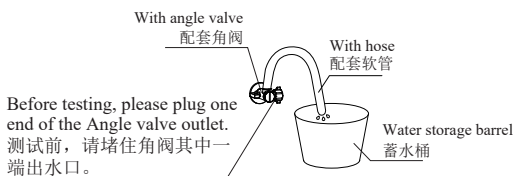

1. Installation of mating angle valve

Draw drain outlet centerline on the floor, Install angle valve at proper position on wall according to dimension of toilet.

Please use the angle valve and hose coming with the product and do not use the old pipe, which may less to risk of water leakage.

If an old Angle valve has been installed on the wall, replace it with a professional to avoid improper removal of the Angle valve.


1. 安装配套角阀

在地面标出排水口的中心线, 按坐便器的尺寸, 在墙面的合适位置安装进水角阀。

温馨提示:


必须使用产品自带的新角阀和新软管组件, 不要使用旧管组件, 否则会引起漏水风险。

若墙面已安装旧角阀, 需由专业人员进行更换, 避免因拆卸不当导致角阀无法安装。

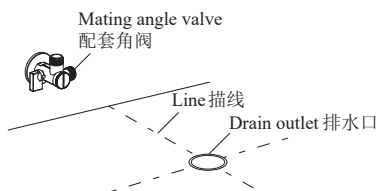


2. Cardboard installation

- Align cardboard with the centerline of drain outlet;
- Draw contour line according to cardboard;

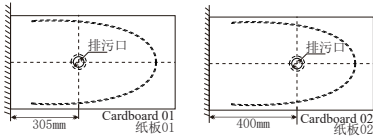

3. Installation of angle valve and flexible hose

 - Installation of angle valve




• Connect water inlet and angle valve with new hose


- Attention! Make sure to flush the water supply pipe completely to remove impurities inside the pipe, the water source should be running water or potable water, never use industrial water, wastewater, sewage, or sea water.

4. Ceramic toilet installation

- Install sealing flange into drain outlet;
- Install ceramic toilet on corresponding position according to contour line.

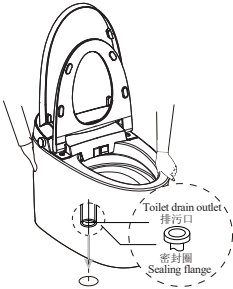

5. Apply high quality mildew glass glue around the lower edge of the toilet.

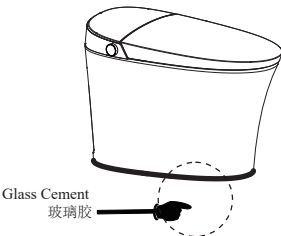


2. 安装纸板安装说明

- 将安装纸板对齐排污口中心线;
- 根据安装纸板描绘出相应的轮廓线。

3. 安装角阀和软管

- 安装角阀。

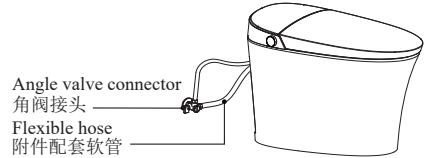

- 用新软管将坐便器的进水口和角阀连接起来。

- 注意! 一定要先彻底冲洗供水管以清除管道中的杂质, 使用水源为自来水或可饮用水, 切勿使用工业用水, 废水, 污水以及海水。

4. 安装坐便器

- 将密封圈套入坐便器排污口;
- 根据描绘出的轮廓线将坐便器装入相应位置。

Tips: The toilet is heavy, and it needs to open the seat cover to carry it by two people.

温馨提示: 由于一体机比较重, 需翻开座圈, 由两人配合抬起。

5. 涂玻璃胶

在便器下边缘周围涂上优质防霉玻璃胶。

Tips: Please clean the drain outlet; Please make sure ceramic toilet outlet sits perfectly on drain outlet.


温馨提示: 请将排污口的垃圾和其他污物清理干净; 安装便器时, 请确保坐便器排水口与地面排污口安装到位。

6. Add foam shield

- Reach under the filling tank with your finger or tool and pull it out (the filling funnel is recommended, as shown below).


6. 添加泡沫盾

- 用手指或者工具伸入加液盒下方将加液盒拉出（建议使用加液漏斗，如下图所示）

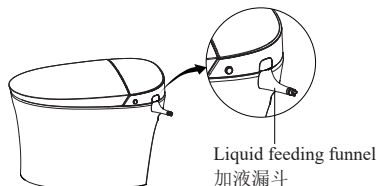


- Remove the seal cover and store.

- 取下密封盖，并保存。

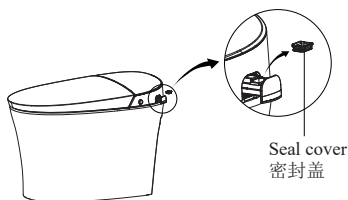


- Put the funnel into the filling port and hold it while the other hand slowly pours the foam into the funnel. (Do not pour foam agent into funnel quickly to avoid foam agent overflow)

- 将漏斗套入加液口，并扶住，另外一只手将泡沫剂缓慢倒入漏斗中。（请勿快速将泡沫剂倒入漏斗中以免泡沫剂溢出）

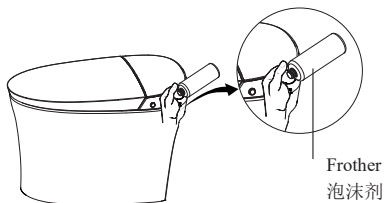

- Close the seal cover and press it firmly, then push the filling pump to the bottom. (If the foam agent overflows during the filling process, use paper towels to dry the liquid and then push it in)

- 盖上密封盖并压紧，然后将加液抽拉盒推到底。（加液过程中若泡沫剂溢出，可用纸巾将液体擦干再推入）

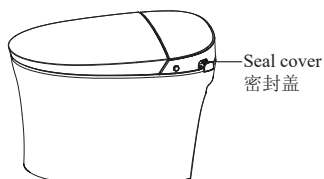

Warm tips:

1. Foam liquid is a consumable product, not covered by warranty, need to be purchased separately.
2. In order to achieve the best effect and prolong the service life of the foam shield, please use our smart toilet special foam agent.

温馨提示:


- 1、泡沫液属于易耗品，不在质保范围，需另行购买。
- 2、为使泡沫盾达到最佳效果以及延长使用寿命，请使用我司智能马桶专用泡沫剂。

1. Turn on the angle valve

Check thread connection, make sure no leakage is found, unscrew angle valve anticlockwise to maximum opening.

1. 打开角阀

查看螺纹连接处密封性, 确定不漏水, 逆时针旋开角阀, 开口调至最大。

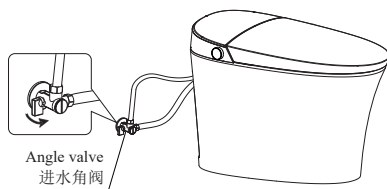


2. Switch the power supply

Insert electric leakage protection plug into power socket, protection switch, indicator light is on which means there is electricity. Press electric leakage test button prior to usage, protection switch bounces to show that protection function works normally.

2. 接通电源

电源线漏电保护插头插入电源插座, 按下复位开关, 插头指示灯亮, 表示通电。

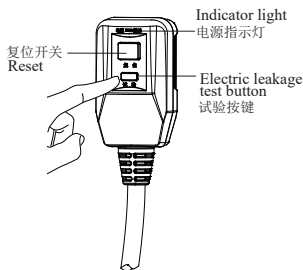

Tips: Press electric leakage test button prior to usage, protection switch bounces to show that protection function works normally.

温馨提示: 使用前先按下漏电试验按键, 复位开关弹起, 指示灯熄灭, 表示漏电保护功能正常。

3. Self-inspection

- ※ The buzzer of the main unit beeps, the self-test starts;
- ※ The buzzer of the main unit beeps again, the self-test is completed;
- ※ Function mode is on to enter normal usage.

3. 安全自检


1. 主机蜂鸣器一声“嘀”, 开始自检;
2. 主机蜂鸣器再响一声“嘀”, 自检完毕;
3. 功能模式开启, 正常使用。

FOOT SENSING FUNCTION

脚感应功能

Touch the sensing area with your foot to achieve a small flush

用脚触碰感应区域，可实现小冲冲水

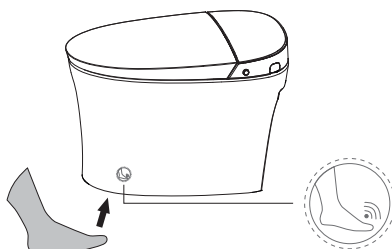

ACTIVATE FOAM SHIELD

启动泡沫盾

Before starting the foam shield for the first time, use the "pump" command to pump the foam agent into the foam shield.

首次启动泡沫盾前，需要使用“抽液”指令先将泡沫剂抽至泡沫盾内。

Long press the button of the remote control until it is released after bubbling out of the outlet, that is, the "pumping" action is completed



出泡


长按遥控器此按钮不松开，直至出泡口出泡后松开，即完成“抽液”动作

Warm tips:

1. It is normal to use the foam shield for the first time after executing the "pumping" instruction.
2. This operation is only used when the toilet has just been installed or the foam agent has been used. The foam agent will be wasted when used in other periods.

温馨提示:

1. 执行“抽液”指令后，首次使用泡沫盾有可能存在泡沫量大，属于正常现象；
2. 该操作仅在马桶刚安装或泡沫剂使用完毕更换泡沫剂时使用，其余时段使用将造成泡沫剂浪费。

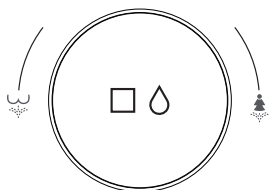

Instruction of knob:

[POWER ON] Standby and without seated, short press the button to power on.

[STANDBY] Press and hold the knob to enter standby mode.

[FLUSHING] Switch on → Short pressing knob (When rear washing, front washing, warm air and nozzle washing are turned off) → Flushing

[REAR CLEANING] Switch on → First time on the seat → Turn the knob backwards to start rear cleaning → Short press the knob to automatically enter the warm air function and flushing function after rear cleaning → Automatic stop. Keep the seat, open the rear cleaning again, short press the knob during the cleaning process, then stop cleaning, open the warm air function, do not open the flushing function. In the rear cleaning process, rotate the knob forward/back to adjust the position of the spray rod and the strength of the water pressure; Long press the knob to switch the position of the spray rod and the strength of the water pressure.

[FEMININE CLEANING] Switch on → First time on the seat → Turn the knob forward to start feminine cleaning → Short press the knob to automatically enter the warm air function and flushing function after feminine cleaning → Automatic stop. Keep the seat, open the feminine cleaning again, short press the knob during the cleaning process, then stop cleaning, open the warm air function, do not open the flushing function. In the feminine cleaning process, rotate the knob forward/back to adjust the position of the spray rod and the strength of the water pressure; Long press the knob to switch the position of the spray rod and the strength of the water pressure.

[NOZZLE CLEANING] Switch on, on standby mode, Turn the knob forward, nozzle extends out → Hand cleaning → Short pressing the knob, nozzle retracts and stop cleaning.

[STOP] When the functions such as rear wash, front wash, drying, nozzle cleaning are turned on, short press the button to stop the current function immediately.

Remark:

The default position of all function positions just set is in the middle position. When using the remote control, switch to the function position set by the remote control.

旋钮操作说明:

[工作模式] 待机且未着座状态, 短按旋钮, 进入工作模式

[待机模式] 长按旋钮, 进入待机模式

[冲 水] 工作模式 → 短按旋钮 (未开启臀洗、妇洗、暖风及喷嘴清洗时) → 冲水

[臀 洗] 工作模式 → 首次着座 → 向后旋转旋钮, 开启臀洗 → 短按旋钮, 结束臀洗后自动进入暖风功能及冲水功能 → 自动停止。保持着座, 再次开启臀洗时, 清洗过程中短按旋钮, 则停止清洗, 开启暖风功能, 不开启冲水功能。臀洗过程中, 向前/后旋转旋钮, 可调节喷杆位置和水压强弱; 长按旋钮进行喷杆位置和水压强弱的切换。

[妇 洗] 工作模式 → 首次着座 → 向前旋转旋钮, 开启妇洗 → 短按旋钮, 结束妇洗后自动进入暖风功能及冲水功能 → 自动停止。保持着座, 再次开启妇洗时, 清洗过程中短按旋钮, 则停止清洗, 开启暖风功能, 不开启冲水功能。妇洗过程中, 向前/后旋转旋钮, 可调节喷杆位置和水压强弱; 长按旋钮进行喷杆位置和水压强弱的切换。

[喷嘴清洁] 工作模式, 无着座状态下, 向前旋转旋钮, 喷杆伸出 → 手动清洗 → 短按旋钮, 喷杆缩回, 结束清洗。

[停 止] 臀洗、女用、暖风、喷嘴清洁开启时, 短按按键可立即停止当前功能。

温馨提示: 刚开机所有功能档位默认位置设置在中间档, 当使用遥控器后, 切换到遥控器设定的功能档位。

ECO 节能

ECO



水温



水温显示

°C



座温



座温显示


°C

Description of LED light on display:

1. In the non-power-saving state, the ICONS of default seat temperature and water temperature light up to display the current seat temperature and water temperature, and display "--" when in neutral;
2. Under the power saving state, the ICONS of ECO, seat temperature and water temperature are lit. If the seat temperature is in neutral before power saving, "--" will be displayed when entering power saving; if the seat temperature is not in neutral before power saving, it will be displayed in one gear when entering power saving; Keep the current water temperature display;
3. Shutdown, the screen display all out;
4. When no one is in use, the screen display will all be off after some time; When someone is sitting or operating any button of the product, the screen will restore the current state;

显示屏LED灯说明:

- 1、在非节能模式下，默认座温、水温图标亮起，显示当前座温、水温温度，空档时显示“——”；
- 2、节能模式下，ECO、座温、水温图标点亮，座温节能前若为空档，则进入节能时显示“——”，节能前若非空档，则进入节能时显示一档；水温显示保持当前状态；
- 3、待机模式时，屏幕显示全部熄灭；
- 4、无人使用状态下，一段时间后屏幕显示全部熄灭；当有人着座时或操作产品任意按键，屏幕则恢复显示当前状态；

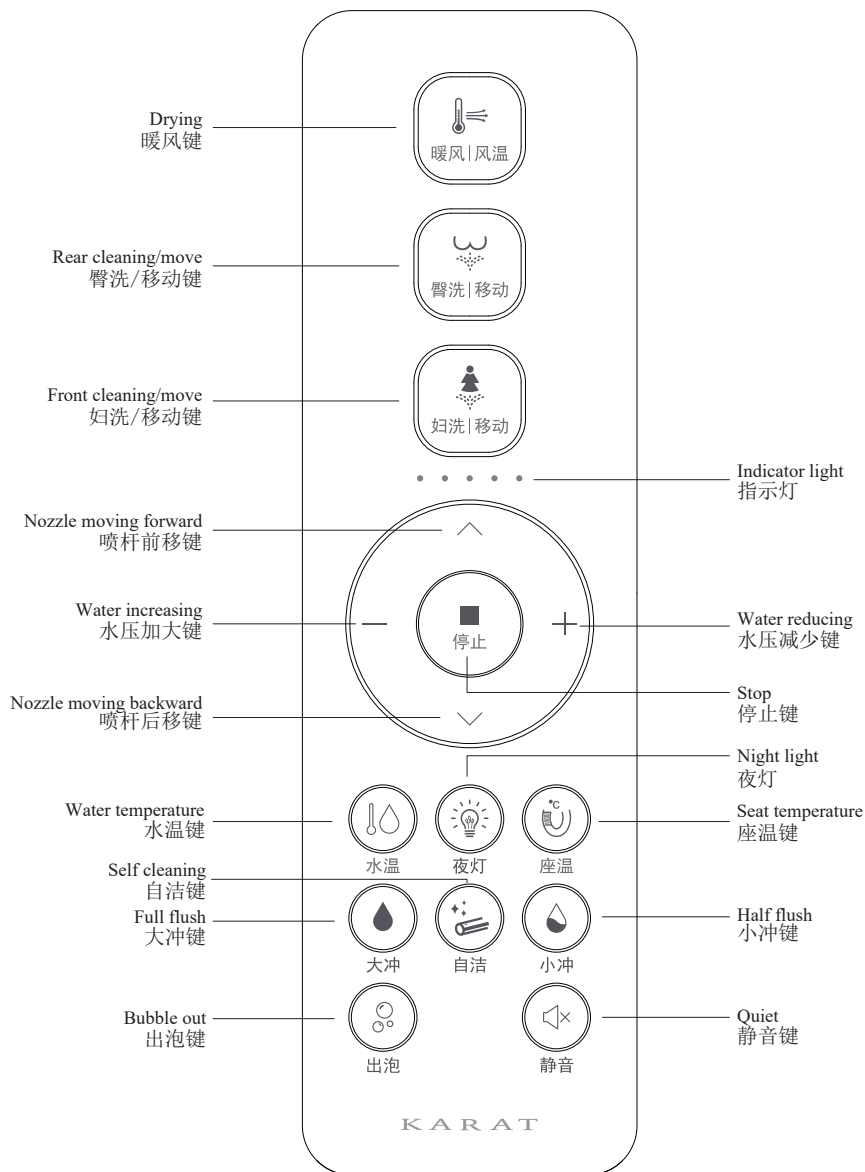

Rear/Front cleaning


Press "🚿" button, the indicator light is on showing current water temperature level, it starts spraying to clean the buttocks ; it will stop drying automatically after a circle of 180 seconds ; If you press the "■" button midway, you can stop cleaning immediately.

Press "👤" button, the indicator light is on showing current water temperature level, it starts spraying to clean the front ; it will stop drying automatically after a circle of 180 seconds ; If you press the "■" button midway, you can stop cleaning immediately.

臀洗/妇洗操作

按一下“🚿”键，指示灯亮起，显示当前水温档位，喷水清洗臀部，再按一下则切换到移动清洗（喷嘴前后移动，扩大洗净范围），持续清洗一个周期约180秒后自动停止，若中途按下“■”键，可立即停止清洗。

按一下“👤”键，指示灯亮起，显示当前水温档位，喷水清洗妇部，再按一下则切换到移动清洗（喷嘴前后移动，扩大洗净范围），持续清洗一个周期约180秒后自动停止，若中途按下“■”键，可立即停止清洗。

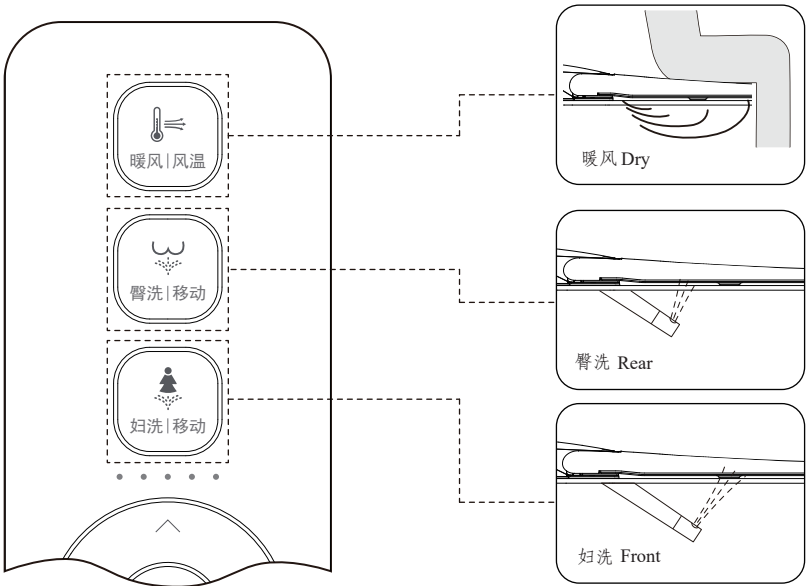

Drying Operation

①Press the "🌬️" button, the indicator light will light up, showing the current air temperature range. It will stop drying automatically after a cycle or after the human body leaves the seat.

②In the process of drying, press the "🌬️" button to adjust the air temperature, and the indicator light will light up to display the wind temperature range. When the indicator light is not on, it is 0 grade (normal temperature range), and the range adjustment mode is 0-5 grade in turn.

暖风操作

①短按“🌬️”键，指示灯亮起，显示当前风温档位，暖风吹出，一个周期后或人体离开座圈后，自动停止暖风。

②在暖风过程中，短按“🌬️”键调节风温，指示灯亮起显示风温档位，指示灯不亮时为0档（常温档），档位调节方式为0-5档依次循环。

| | | | | | |
|-------------|-----------|-----------|-----------|-----------|-----------|
| ● ● ● ● ● | ● ● ● ● ● | ● ● ● ● ● | ● ● ● ● ● | ● ● ● ● ● | ● ● ● ● ● |
| 常温 | 第1档 | 第2档 | 第3档 | 第4档 | 第5档 |
| Normal | Grade 1 | Grade 2 | Grade 3 | Grade 4 | Grade 5 |
| temperature | | | | | |

Spray nozzle position adjustment

Press " ^ " or " v " button when it is under function of rear cleaning or front cleaning, the indicator light will be on showing current nozzle position, adjust nozzle position by 5 levels.

喷嘴位置调节


在“臀洗”或“妇洗”时，短按喷嘴位置“ ^ ”，“ v ”键，指示灯亮起，显示当前喷嘴档位，可在5档之间调节喷嘴位置前移、后移。

Water volume adjustment

Press " + " or " - " button when it is under function of rear cleaning or front cleaning, the indicator light will be on showing current water volume level, adjust water volume by 3 levels.

水压调节

在“臀洗”或“妇洗”时，短按水压“ + ”，“ - ”键，指示灯亮起，显示当前水压档位，调节水压大小。

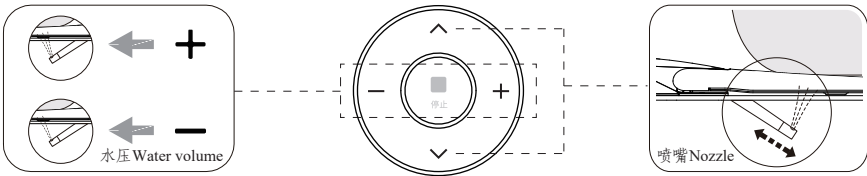

Water temperature adjustment

Short press the " ℓ " button to adjust the water temperature. The indicator will show the water temperature level if it's on. When the indicator is off, the water level is 0. Short press this button to adjust water temperature level from 0 to 5 in cycle.

水温调节

短按 " ℓ " 键调节水温，指示灯亮起显示水温档位，指示灯不亮时为0档(常温档)，档位调节方式为0-5档依次循环。

| | | | | | |
|-------------|-----------|-----------|-----------|-----------|-----------|
| ○ ○ ○ ○ ○ | ● ○ ○ ○ ○ | ● ● ○ ○ ○ | ● ● ● ○ ○ | ● ● ● ● ○ | ● ● ● ● ● |
| 常温 | 第1档 | 第2档 | 第3档 | 第4档 | 第5档 |
| Normal | Grade 1 | Grade 2 | Grade 3 | Grade 4 | Grade 5 |
| temperature | | | | | |

Seat temperature adjustment

Short press the " ☺ " button to adjust the seat temperature. The indicator will show the seat temperature level if it's on. When the indicator is off, the seat level is 0. Short press this button to adjust seat temperature level from 0 to 5 in cycle.

座温调节

短按 " ☺ " 键调节座温，指示灯亮起显示座温档位，指示灯不亮时为0档(常温档)，档位调节方式为0-5档依次循环。

| | | | | | |
|-------------|-----------|-----------|-----------|-----------|-----------|
| ○ ○ ○ ○ ○ | ● ○ ○ ○ ○ | ● ● ○ ○ ○ | ● ● ● ○ ○ | ● ● ● ● ○ | ● ● ● ● ● |
| 常温 | 第1档 | 第2档 | 第3档 | 第4档 | 第5档 |
| Normal | Grade 1 | Grade 2 | Grade 3 | Grade 4 | Grade 5 |
| temperature | | | | | |

Night light


- Night light adjustment: Short press " 💡 " button to turn on/turn off night light.
- Smart mode: Long press " 🌙 " button to enter into intelligent mode (Night light will be on or off by detecting the lightness of surroundings). If the product is on intelligent mode, short press " 🌙 " button to exit intelligent mode. (Night light factory default setting is intelligent mode)

夜灯设置

- 夜灯调节：短按 " 💡 " 键，开/关夜灯。
- 智能模式：长按 " 🌙 " 键进入智能模式（依外界环境明/暗自动开/关夜灯），若处于智能状态，短按 " 🌙 " 键则退出智能模式。（夜灯出厂默认设置为智能模式）


Half flush/Full flush

· Short press "💧" button, the toilet starts half flushing.
· Short press "💧" button, the toilet starts full flushing.
· Long press "💧" button to turn on/off auto flush function.
When the auto flush function is turned on, toilet will automatically flush after detecting user leaving the seat.

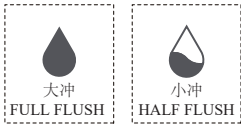

冲水功能

①短按“💧”键，启动半冲功能，马桶开始半排水。
②短按“💧”键，启动全冲功能，马桶开始全排水。
③长按“💧”键，开启自动冲水功能，蜂鸣器“嘀”响一声；
④再次长按“💧”键，关闭自动冲水功能，蜂鸣器“嘀”响二声；
在开启自动冲水功能后，离座时会进行大/小冲功能。

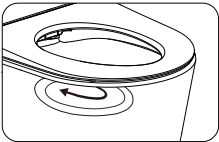

Quite mode

Short press "🔇" button to turn on/off quiet mode.

静音开关

短按“🔇”键，开/关静音功能。

Nozzle cleaning

When no one is seated, short press "🚿" button, the nozzle will automatically stretch out to allow access for cleaning. Press "■" button to return the spray wand to its normal position.

喷嘴自洁

未落座时，短按“🚿”键，喷嘴自动伸出，允许进入清洁。按“■”键，喷嘴自动收回。

Foot sense switch

Long press "💧" button to turn the foot sense function on or off. In the seated status, foot sense function is invalid.

脚感开关

长按“💧”键，开启脚感功能，蜂鸣器“嘀”响一声；再次长按“💧”键，关闭脚感功能，蜂鸣器“嘀”响二声；在着座状态下，脚感无效。

Bubble out setting

① Press "🫧" to enable the foam shield function.
② Long press the "🫧" to start the rapid pumping of the foam shield until the bubble emerges from the bubble outlet and then release the "🫧" key. (Note: This operation is only used when the toilet has just been installed or the foaming agent has been used, and the foaming agent will be wasted when used in other periods)
③ Press the "■" key first, and press the "🫧" key, start the automatic bubble function, the buzzer "beep" sound;
Press the "■" key again, and then press the "🫧" key to turn off the automatic bubble function, the buzzer "beep" twice.
(Automatic bubbling function is disabled by default)

出泡设置

①短按“🫧”键，开启泡沫盾功能；
②长按“🫧”键，开启泡沫盾的快速抽液，直至出泡口出泡后松开“🫧”键。
(注意：该操作仅在马桶刚安装或泡沫剂使用完毕再次添加起泡剂时使用，其余时段使用将造成泡沫剂浪费)
③先按“■”键，并按下“🫧”键，开启自动出泡功能，蜂鸣器“嘀”响一声；
再次按“■”键，并按下“🫧”键，关闭自动出泡功能，蜂鸣器“嘀”响二声。
(自动出泡功能默认关闭)

Automatic pre-wetting button

Press and hold the "■" button and press the "💧" button to turn on or off the automatic pre-wetting function. After the automatic pre-wetting function is turned on, the pre-wetting function is performed when the user is detected to be seated.

Energy saver

Long press "■" button to enter energy saving mode, long press "■" button again to exit energy saving mode.

Energy saving

Under energy saving mode, seat temperature is low(level 1) to achieve energy saving.(Note: If the seat temperature before energy saving is neutral, keep the neutral after energy saving)

User code

(Tips: When multiple hosts are placed together, code alignment is required to avoid interference of remote control operation before each host)

- ① Plug in the toilet. It will execute self-inspection. When finished, it beeps once.
- ② First press "■" button, then press "👤" button,
- ③ Press the Pressure "+" or "-" button to select user 1-9 (as shown the figure below). The indicator light displays the corresponding user code and flashes.
- ④ Press "■" button, then press "👤" button. The main unit beeps once, means the remote control and the toilet are matched successfully.
- ⑤ After the host is powered off, power on the host again. If the remote control has alignment codes before, remove the battery of the remote control so that the remote control codes return to zero before re-alignment

| | | |
|-----------|-----------|-----------|
| ● ○ ○ ○ ○ | ○ ● ○ ○ ○ | ○ ○ ● ○ ○ |
| 用户1 | 用户2 | 用户3 |
| User 1 | User 2 | User 3 |
| ○ ● ● ○ ○ | ○ ○ ● ○ ○ | ○ ○ ○ ● ● |
| 用户7 | 用户8 | 用户9 |
| User 7 | User 8 | User 9 |

Tips

- The buzzer will sound “BEEP” when the user presses one button which means the main unit receives the signal and conduct the operation accordingly. If the buzzer doesn't sound, it means the main unit doesn't receive the signal, please adjust the remote control direction and repress the button.
- In case of power cut during nozzle spray operation, the nozzle cannot go back to place, please wait until the power is reset. In case of a power cut for a long period, please push the nozzle softly back by hand. Do not push hard, to avoid damage to nozzle and electrical machine.

自动预湿润

先按住“■”键，并按下“💧”键，开启自动预湿润功能，蜂鸣器“嘀”响一声；再次按住“■”键，并按下“💧”键，关闭自动预湿润功能，蜂鸣器“嘀”响二声；在开启自动预湿润功能后，当检测到用户着座时，会进行陶瓷预湿润功能。

节能设置

- ① 长按“■”键，开启节能模式，蜂鸣器“嘀”响一声；
 - ② 再次长按“■”键，关闭节能模式，蜂鸣器“嘀”响二声；
- 节能状态下说明：
- 设定节能后，在节能模式下，座温处于低温状态（第一档温度）以达到节能的目的。（注：节能前座温若为空档，节能后保持空档）
- 节能时如果中途有人使用座圈，节能模式暂停，进入功能模式，座圈立即开始加热（不关闭座温情况下），人体离开座圈后，即恢复节能模式。

用户对码

（温馨提示：多台主机放置一起时为避免各台主机之前遥控操作干扰才需对码）

- ① 主机上电自检完后“嘀”一声；
- ② 先按住“■”键再按下“👤”键，指示灯闪烁；
- ③ 按下水压“+”或“-”键来选择用户码1-9（如下图所示），指示灯显示对应用户码并闪烁；
- ④ 再次先按住“■”键再按下“👤”键，主机“嘀”一声，对码成功。
- ⑤ 主机断电后重新上电，如果之前遥控器有对码，需将遥控器电池拆下使遥控器码数归零后才能按对码步骤重新对码；


| | | |
|-----------|-----------|-----------|
| ○ ○ ○ ● ○ | ○ ○ ○ ○ ● | ● ● ○ ○ ○ |
| 用户4 | 用户5 | 用户6 |
| User 4 | User 5 | User 6 |

温馨提示

- 每次按按键，蜂鸣器“嘀”响一声，表示主机接收到信号，并执行信号。如果蜂鸣器未响，表示主机未接收到信号，请调整遥控器发射方向重新按按键。
- 在喷洗过程中，突然停电，喷杆无法缩回，请等待来电重新开机，喷杆会自动收回。若长时间断电且需要使用马桶，可轻轻用手将喷杆推回。请勿用力推拉喷杆，以免损坏喷杆和电机。

Remote control hanger installation 1:

1. Drill a 6 mm diameter hole in the wall to a depth of about 35 mm.
2. Tear off the double-sided adhesive sticker on the back of the hanger.
3. Install the expansion pipe into the wall hole, and align it with the hanger hole. Attach the double-sided adhesive sticker on the back of the hanger to the wall, lock the screw, and tear off the double-sided adhesive sticker on the back of the patch and stick it on.

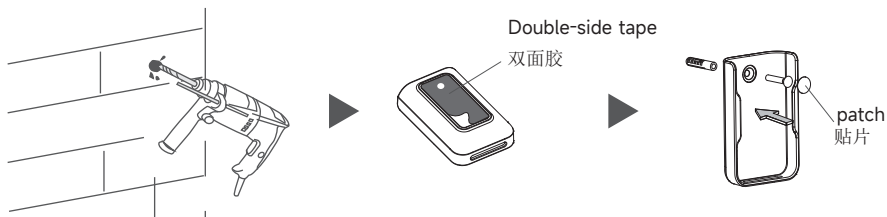


遥控器挂架安装方式一

- 1、在墙壁钻一个直径为6mm的孔，深度约35mm。
- 2、将挂架背面双面胶贴纸撕下。
- 3、将膨胀管装入墙孔内，挂架孔对准膨胀管，把挂架背面的双面胶紧贴在墙壁上，锁紧螺钉，将贴片背面双面胶贴纸撕下，并黏上。

Remote control hanger installation 2:

1. Clean and wipe dry the pre- installed area of the remote control hanger on the wall.
2. Tear off the double-sided adhesive sticker on the back of the hanger.
3. Stick to the wall vertically, tear off the double-sided adhesive sticker on the back of the patch and stick it on.

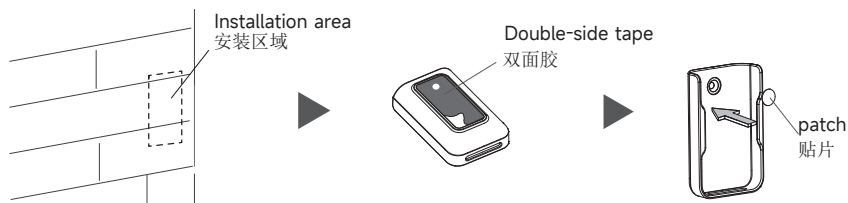

遥控器挂架安装方式二

- 1、清洁并擦干墙上遥控器挂架预安装的区域。
- 2、将挂架背面双面胶贴纸撕下。
- 3、竖直贴紧墙壁，将贴片背面双面胶贴纸撕下，并黏上。


Battery installation:

1. Install the new battery into the remote control and cover the battery cover.
2. Put the remote control in the hanger.



安装电池:

- 1、将新电池装入遥控器，盖上电池盖。
- 2、将遥控器放入挂架中。

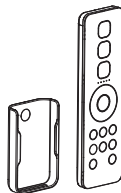

Notice: 1. When determining the installation position, it is necessary to ensure that the remote control can be reached by hand when the person is sitting on the ring.
2. It is forbidden to install and use the product in the bathroom and other wet places. And do not put it in the place where it is easy to be drenched by water.



提示: 1、确定安装位置时，需注意当人坐在座圈上，保证手可以拿到遥控器。
2、请勿在浴室等潮湿的地方安装使用产品，禁止置于易被水淋到的地方。

Main unit care and maintenance

1. Shut off power supply at maintenance.
2. Turn the seat upward open, press down the button located on the right side of main unit and pull out the seat. Wipe the stain with a soft damp cloth.
3. Safety self- inspection
After cleaning, re-connect the toilet with the power supply.

Spray nozzle maintenance and care

1. Nozzle self-cleaning
Before or after rear and feminine cleaning, the nozzle starts self-cleaning and stops automatically after a period of self-cleaning.
2. Nozzle manual cleaning
 - The nozzle out
User not seated, the knob turn forward to start the nozzle manual cleaning function, and the nozzle will automatically extend and the washing water flow out of cleaning spray rod.
 - Spray nozzle disassemble
When the wand moves forward, the nozzle can be disassembled to clean.
Note: When disassembling the nozzle, use one hand to fix the wand and the other hand to pull down the nozzle to avoid forcibly pulling the nozzle to prevent damage to the wand.
 - Use soft cloth or soft brush to clean
Do not pull or push the wand, to avoid damage.
 - Nozzle assembly
Put the nozzle back to the front of the boom and press the "Stop" button to automatically retract the nozzle.

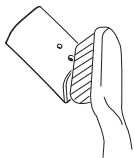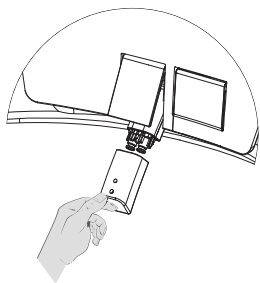

产品的保养

1. 切断电源
产品保养时请先切断电源。
2. 柔软抹布擦拭
请用拧干水分的柔软抹布擦拭脏污部位。
3. 安全自检
擦拭完成后请重新接上电源。



喷嘴的保养

- 1、喷嘴自洁
每次臀洗、妇洗开启前或臀洗、妇洗结束后，喷嘴自动流水自洁一段时间后自动停止。
- 2、喷嘴手动清洗
 - 喷嘴伸出
人体无着座，旋钮向前旋转启动喷嘴手动清洗功能，喷嘴会自动伸出并有自洁水流出清洗喷杆。
 - 喷嘴拆卸
喷嘴自动伸出以后，可拆下喷嘴头部清洗。
注意：拆喷嘴时，一只手固定喷杆，另一只手将喷嘴拉下。避免强行拉扯喷嘴，以防损坏喷杆。
 - 请用柔软抹布或软毛刷擦拭
请勿将喷杆外拉或内推，以免破坏喷杆或电机。
 - 收回喷嘴
将喷嘴头部装回喷杆前端，短按旋钮启动停止功能，喷嘴自动收回。


MAINTENANCE OF FILTER NET

过滤阀芯的保养

Time for maintenance: It is under normal water pressure but poor flush occurs.

1. Turn off power and the angle valve
2. Unscrew angle valve nut
3. Remove filter net
4. Use the brush to clean filter net
5. Reinstall filter net and angle valve nut
6. Turn on the angle valve and connect power, then it can work normally after self inspection.


*It is recommended that you clean the filter once in 1-2 months

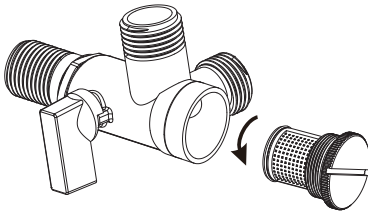

保养时机：当水压正常但冲刷效果不佳时。

1. 断开电源，关闭角阀
2. 旋开角阀螺母
2. 取出过滤阀芯
4. 用牙刷刷洗，清水冲去阀芯内泥沙
5. 装回过滤阀芯，重新安装角阀螺母
6. 打开角阀，接通电源，自检完毕后即可正常使用。

*建议1-2月清洗一次过滤网

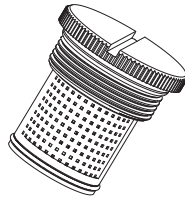

EMERGENCY TROUBLESHOOTING


紧急情况

Electricity and water supply cut-off


1. Power failure
Press the manual flushing button to flush the toilet.
2. Water failure
Put around 8L water into a barrel and flush the bowl of ceramic.
Note: Avoid water spilling from bowl.

停电停水

1. 停电时冲洗坐便器的方法
按下手动冲刷按钮，进行冲洗。
2. 停水时冲洗坐便器的方法
将水放入较大的水桶（约8L）内，以坐便器槽面为中心进行冲洗。此时，注意防止水从坐便器溢出。

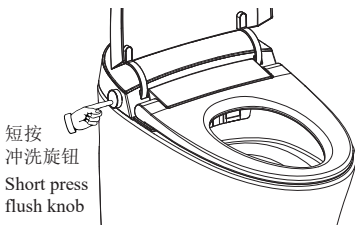

短按
冲洗旋钮
Short press
flush knob

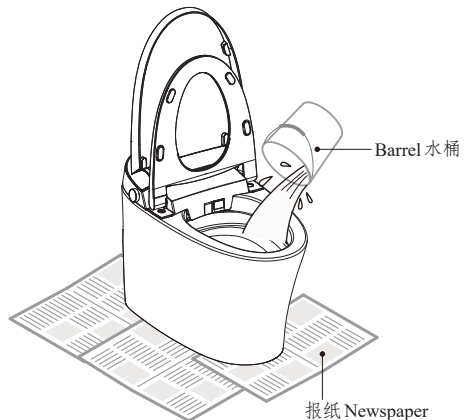

Bidet seat battery installation and replacement

Tips:

- It is recommended to ask professional personnel to operate!
- When the product does not perform the flushing function after short or long pressing of the knob and the night light blinks for 10 consecutive times, it indicates that the flushing battery is about to run out of power and a new battery needs to be updated.
- Please use 9V alkaline battery (6LR61). It is recommended to replace the battery every two years.

1. Pull out the power plug and turn off the angle valve;
2. Fully open the seat and cover, remove decorative caps, screws and washers.

3. Pull up the bidet seat slightly with both hands in the vertical direction, so that the back end is separated from the ceramic positioning rod. (It is normal to have a "click" sound during the pulling process.)
4. Pull out the connecting wire, loosen the silicone tube connected with ceramic foam shield on the cover plate, screw into the water hose, and take out the electronic cover plate;


5. With the front of the electronic cover plate upwards, unscrew the nut of the foam shield liquid storage bottle, collect the foam agent in the liquid storage bottle with the container (capacity greater than 600ml), and lock the liquid storage bottle with the nut when there is no foam agent in the liquid storage bottle. (Add this operation if there is no sealing plug at the filling port)

冲刷电池的更换方法


温馨提示:

- 进行此步骤时，建议请专业人员进行操作！
- 当短按或长按旋钮后产品未执行冲水功能并且夜灯连续闪烁10次时，表示冲水电池电量即将耗尽，需要重新更新新电池。
- 请使用9V碱性电池（6LR61），电池建议每隔2年更换一次。


1. 拔出电源插头，关闭角阀；
2. 完全打开座圈和便盖，取出左右两边的装饰盖，旋出螺钉（逆时针方向），并取出垫片；

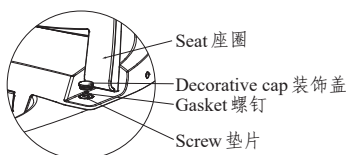


3. 双手小幅度沿竖直方向上拉盖板，使盖板后端脱离陶瓷定位柱（拔起过程中有“咔咔”声音为正常现象）；
4. 拔出对接连接线，松开盖板上泡沫盾连接陶瓷的硅胶管，旋开进水管，取出电子盖板；

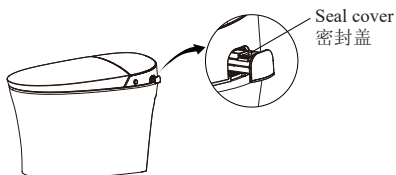


5. 电子盖板正面朝上，旋开泡沫盾储液瓶的螺母，用容器（容量大于600ml）收集储液瓶中的泡沫剂，待储液瓶中无泡沫剂后用螺母锁紧储液瓶。（若加液口没有密封塞，则需增加此操作）

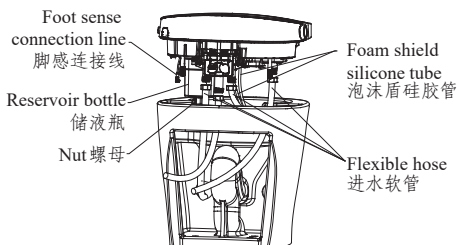

- Place the bidet seat flat on the workbench with the bottom facing up. (Please use a blanket or other soft material to cushion the bidet seat to avoid scratching.)
- Remove the battery box cover from the bottom to install or replace the battery.
- Plug the cover plate of the replaced battery into the connecting cable, install the foam shield silicone tube, tighten the water inlet pipe, and then put it back on the toilet. Then add the foam agent in the container to the electronic cover plate through the liquid pumping box (If there is step 5, then the filling step needs to be performed). Last open the Angle valve and power on again. (Note: The blue silicone tube is connected to the thinner interface, and the transparent silicone tube is connected to the thicker interface.)

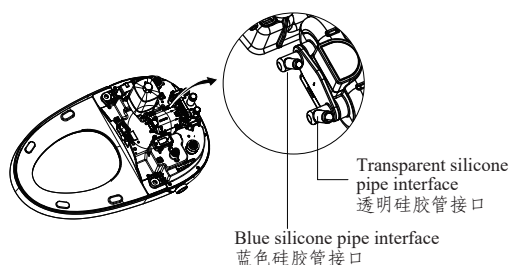

- 将盖板平放在工作台上，底部朝上放置(请用毛毯或其他柔软物垫盖板，避免更换过程中划伤盖板外观)；
- 从盖板底部拆下电池盒盖，更换冲刷电池；
- 将换好电池的盖板插上对插连接线，装上泡沫盾硅胶管，旋紧进水管，再装回马桶上；然后将容器中的泡沫剂通过加液抽拉盒添加到电子盖板中（若有第5步骤，则需进行加液步骤）；最后打开角阀，重新上电。（注：蓝色硅胶管接较细的接口，透明硅胶管接较粗的接口。）

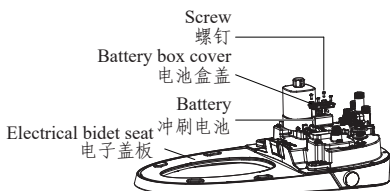

When the product is left unused for long time

- Especially in winter when no one at home for a long time, please drain out the water inside ceramic and pipe to prevent freezing.

To discharge water


- Cut off the electricity.
- Drain out the water inside tank
Turn off angle valve, flush all water inside by pressing and holding manual flush button.
- Drain out the water inside pipe
Unscrew the hose connector off angle valve, drain the water in the pipe and reinstall.
- Handle the remaining water in bowl
It is suggested to put some antifreeze into water inside the bowl.

长时间不使用时

- 尤其是冬季，长期不在家时，请务必将陶瓷及管路中的水放掉，防止冻结。

放水的方法

- 拔出电源插头，切断电源
- 将马桶水箱中的水排空
关闭进水角阀，长按手动冲刷按键将水排空。
- 将管路中的水排空
将软管从角阀上旋开，排空管路的水后重新装回。
- 处理便器内积水
为了安全起见，建议将防冻液放入便器内的积水中。

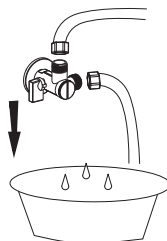

Tips: When you use this device again please do reconnect to water and power supply.


! Note: Before water discharging, the power must be cut off!

温馨提示：再次使用坐便器时，请务必再次通水、通电。

! 注意：在电子坐便器放水前，必须切断电源！


| Problem | Cause | Solution |
|--|---|---|
| No flushing | Water supply hose buckling causes block | Solve the buckling |
| | Fill valve is off | Turn on the fill valve |
| | Water supply is cut off | Connect water supply and wait for the water |
| Poor flushing | Water supply hose buckling causes partial block | Solve the buckling |
| | Fill valve is not fully turned on | Turn on the fill valve fully |
| | Filter is dirty and causes block | Clean the filter |
| The water is not hot | The water temperature is setted on normal temperature level | Reset the water temperature |
| Seat temperature is not hot | The seat temperature is setted on normal temperature level | Reset the seat temperature |
| | In standby mode | Shift to function mode for 3 minutes |
| Wind temperature is not hot | The wind temperature is setted on normal temperature level | Reset the wind temperature |
| No wind out | In standby mode | Shift to function mode to use dry function |
| spray wand cannot retracted | Power off | Push back the wand lightly and wait for the power |
| | Get stuck by impurities | Clear away the impurities |
| Spray wand cannot stretch out | Power off | Push back the wand lightly and wait for the power |
| | Do not sit in sensing area | Sit right in the sensing area |
| Controller cannot display | Reverse the polarity of battery | Reload the battery |
| | Batteries cannot supply enough power | Replace new batteries |
| When power is off, there will be no flush by pressing knob | battery out of power | Take E bidet off of the toilet, open the battery box lid from the bottom of E bidet and replace the battery |
| The foaming volume of foam shield is small | The foam agent is used up | Adding foam agent |
| After adding the foam agent, the foam shield foaming amount is small | After the foam agent is used up, there is air in the foam shield line | Execute the "pumping" instruction to extract the solution in the foam agent into the foam shield; (Affected by the amount of air in the foam shield pipe, it may take several times to execute the "pumping" command to achieve the normal foaming effect of the foam shield) |

| 现象 | 原因 | 处理 |
|----------------|-------------------|-------------------------------|
| 不喷水 | 进水管弯折造成堵塞 | 排除进水软管弯折 |
| | 进水阀关闭 | 打开进水阀 |
| | 自来水断水 | 等待来水 |
| 喷水强度弱 | 进水管弯折造成部分堵塞 | 排除进水软管弯折 |
| | 进水阀未完全打开 | 完全打开进水阀 |
| | 进水滤网阻塞 | 清洗进水滤网 |
| 水温不热 | 水温设定常温档 | 重新设定水温档位 |
| 座温不热 | 座温设定常温档 | 重新设定座温档位 |
| | 处于待机模式 | 切换到功能模式3分钟后使用 |
| 风温不热 | 风温设定常温档 | 重新设定风温档位 |
| 不出风 | 处于待机模式 | 切换到功能模式使用暖风功能 |
| 喷杆不缩回 | 断电 | 将喷杆轻轻推回，等待来电 |
| | 被异物卡住 | 清除异物 |
| 喷杆不伸出 | 断电 | 等待来电 |
| | 未坐到着座感应区 | 位置坐正，坐到感应区 |
| 遥控器不显示 | 遥控器电池正负极装反 | 重新装电池，对准正负极 |
| | 遥控器电池电量不足 | 更换新电池 |
| 停电后，按压本机旋钮不冲水 | 冲刷电池电量不足 | 拆下电子盖板，从电子盖板底部拆开电池盒盖，进行更换冲刷电池 |
| 泡沫盾出泡量小 | 泡沫剂用完 | 添加泡沫剂 |
| 添加泡沫剂后，泡沫盾出泡量小 | 泡沫剂用完后，泡沫盾管路里存在空气 | 执行“抽液”指令将泡沫剂内溶液抽取进泡沫盾； |

 注意: 如果按上述方法处理后故障仍未排除，应切断电源，联系服务商，请专业人员维修。
 如果电源漏电保护开关时常跳开，表示产品有漏电，请切断电源，联系服务商，请专业人员维修。

Shanghai Chehe Trading Co., Ltd.
Address: Floor 2, No.126,128,130 Jiang Chang San Road, Jing An District, Shanghai, PRC.
Tel: 400-920-8262
Postcode: 200436

上海澈和贸易有限公司
地址：上海市静安区江场三路126、128、130号2层
电话：400-920-8262
邮编：200436

- 根据中华人民共和国《电器电子产品有害物质限制使用管理办法》的相关规定和要求，提供如下包括电子产品部品名称及有害物质的样式。
- 在当前技术水平下，所使用有害物质的含量控制到了最底线。本公司会继续努力通过改进技术来减少这些物质的使用。
- 本产品的“环保使用期限”为10年，其表示如右图所示。 可更换部件的环保使用期限可能与产品的环保使用期限不同。只能在本说明书所述正常情况下使用本产品时，“环保使用期限”才有效。

| 产品中有害物质的名称及含量 | | | | | | | |
|---------------|-----------|-----------|-----------|-----------------|---------------|-----------------|----|
| 部品名称 | 有害物质 | | | | | | 备注 |
| | 铅 (Pb) | 汞 (Hg) | 镉 (Cd) | 六价铬 (Cr(VI)) | 多溴联苯 (PBB) | 多溴二苯醚 (PBDE) | |
| 电源线 | × | ○ | ○ | ○ | ○ | ○ | |
| 电路板 | × | ○ | ○ | ○ | ○ | ○ | |
| 着座传感器 | × | ○ | ○ | ○ | ○ | ○ | |
| 温度传感器 | × | ○ | ○ | ○ | ○ | ○ | |
| 温度保护器 | ○ | ○ | × | ○ | ○ | ○ | |
| 接地片 | × | ○ | ○ | ○ | ○ | ○ | |
| 进水软管 | × | ○ | ○ | ○ | ○ | ○ | |
| 膨胀螺栓 | × | ○ | ○ | ○ | ○ | ○ | |
| 角阀 | × | ○ | ○ | ○ | ○ | ○ | |
| 稳压组件 | × | ○ | ○ | ○ | ○ | ○ | |
| 电机组件 | × | ○ | ○ | ○ | ○ | ○ | |

本表格依据SJ/T 11364的规定编制。

○：表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572标准规定限量要求以下。

×：表示该有害物质至少在该部件某一均质材料中的含量超出GB/T 26572标准规定的限量要求。

上述“X”标识的部品现阶段没有可替代的技术和部件，且符合国家《电器电子产品有害物质限制使用管理办法》的法规要求。

Grade of Energy Efficiency and Water Efficiency 能效水效等级说明

本公司智能坐便器产品能效水效等级符合GB 38448《智能坐便器能效水效限定值及等级》的要求，智能坐便器能效水效等级指标如下表：

| 智能坐便器能效水效等级 | | | 1级 | 2级 | 3级 |
|--|-------------------|----------|--------|--------|--------|
| 能效等级指标 | 单位周期能耗/ (kW·h) | 带坐圈加热功能 | ≤0.030 | ≤0.040 | ≤0.060 |
| | | 不带坐圈加热功能 | ≤0.010 | ≤0.020 | ≤0.030 |
| 水效等级指标 | 智能坐便器清洗平均用水量/L | | ≤0.30 | ≤0.50 | ≤0.70 |
| | *智能坐便器冲洗平均用水量/L | | ≤4.0 | ≤5.0 | ≤6.4 |
| | *双冲智能坐便器冲洗全冲用水量/L | | ≤5.0 | ≤6.0 | ≤8.0 |
| 注1：“*”适用于一体式智能坐便器。 | | | | | |
| 注2：每个水效等级中双冲智能坐便器的半冲平均用水量不大于其全冲用水量最大限定值的70%。 | | | | | |

(注：您所购买的产品的能效水效等级以产品或包装物上标识的能效水效等级为准。)

智能坐便器施加的水效能效标识的说明：该水效能效标识是表示智能坐便器水效能效等级等性能的一种符合性标志。



卡丽官方微信



卡丽新浪官方微博

上海澈和贸易有限公司

地址：上海市静安区江场三路126、128、130号2层

电话：400-920-8262

www.karat.com.cn